

PARTS BOOK


TRONIC 6 F

Automatic industrial lockstitch
sewing machine



1. 机壳部件

Housing component

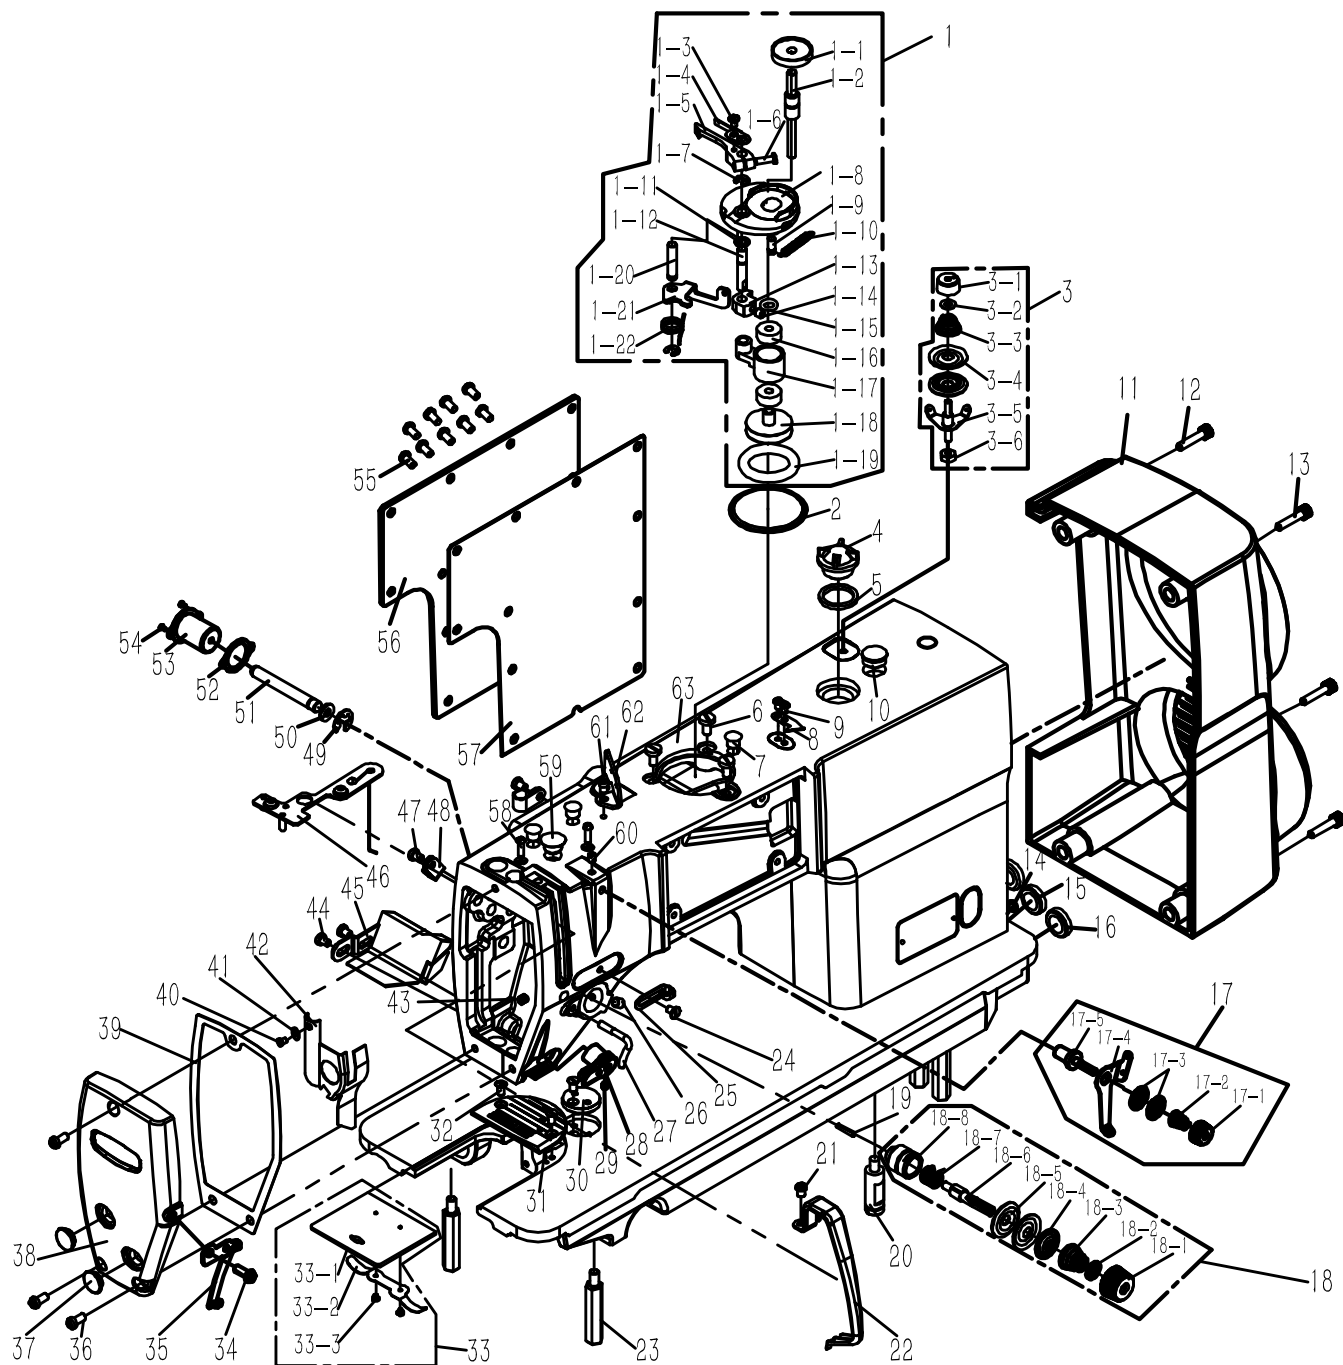


序号 Ref. No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty
1	280001041	绕线器组件	Winder assembly	1
1-1	991001041-16	梭芯座	Bobbin holder	1
1-2	991001041-3	绕线轴	Roll	1
1-3	991001041-15	螺钉	Screw	1
1-4	991001041-14	梭芯夹	Bobbin clamp	1
1-5	991001041-12	梭芯压臂柄	Spindle press arm handle	1
1-6	991001041-13	螺钉M4x12	Screw M4x12	1
1-7	991001041-1	卡簧	Jump ring	2
1-8	280001041-1	绕线器座	Coil holder	1
1-9	280001041-2	绕线器弹簧柱	Coil spring post	1
1-10	991001041-19	绕线器拉压弹簧	Spring	1
1-11	991001041-11	平垫圈S6	Gasket	1
1-12	991001041-9-3	梭芯夹轴	Spindle clamp shaft	1
1-13	991001041-9-1	梭芯夹凸轮	Spindle clamp CAM	1
1-14	991001041-9-2	螺钉M5x5	Screw M5x5	1
1-15	991001041-5	O型圈P9	O-ring	1
1-16	280001041-3	绕线器轴承	Bearing	2
1-17	991001041-2	绕线轴基座	Base around the spool	1
1-18	991001041-6	绕线轮	reel	1
1-19	991001041-8	橡皮垫圈29	Gasket	1
1-20	280001041-4	绕线杠杆轴	Winding lever shaft	1
1-21	991001041-17	绕线杠杆	Winding lever	1
1-22	991001041-18	绕线复位弹簧	Reset spring	1
2	991001056G	绕线器垫片	Bobbin washer	1
3	GT6001045	绕线夹线器(双耳)	Thread tension asm	1
3-1	280001045-1	夹线螺母	Tension nut	1
3-2	991001045-4	夹线板	Thread tension disk presser	1
3-3	991001045-3	夹线弹簧	Tension spring	1
3-4	991001045-5	过线板	Thread tension guide	2
3-5	GT6001045-1	夹线螺钉	Tension post	1
3-6	991001045-6	夹线螺母(下)	Tension nut	1
4	991009001	油窗	Oil sight window	1
5	991009002	油窗O型圈	Rubber ring	1
6	M080500810	绕线器螺钉	Screw M5x10	3
7	991001005	橡皮塞	Rubber plug	3
8	991001043	割线刀	Knife	1
9	S093574005	割线刀螺钉	Screw SM 9/64x40 L=5.4	2
10	880002005	加油橡皮塞	Rubber plug	1
11	GT6001010	电机罩壳	Motor housing	1
12	M180500825	螺钉	Screw M5 L=25	1
13	M180500820B	螺钉	Screw M5 L=20	3
14	030307017	右销橡皮塞	Right pin rubber plug	1
15	288001018	下轴盲孔塞	Lower shaft blind hole plug	1
16	030304031	送布抬牙轴孔塞	Lift the shaft hole plug	2
17	280001019G	小夹线器组件	Small clamp assembly	1
17-1	280001019-5	小夹线螺母	Thread tension nut	1
17-2	991001019-4	小夹线簧	Thread tension spring	1
17-3	991001019-3	小夹线板	Thread tension disk	2
17-4	991001019-2	小夹线过线板	Thread tension guide	1
17-5	991001019-1	小夹线螺钉	Small clip line screw	1
18	281001025G	夹线器	Thread tension asm	1
18-1	281001025-1	夹线螺母	Tension nut	1
18-2	991001025-2	夹线止动片	Rotating stopper	1
18-3	991001025-3	夹线簧	Clamping spring	1
18-4	991001025-4	夹线压板	Thread tension disk presser	1
18-5	991001025-5	夹线板	Thread tension disk	2
18-6	991001025-6	夹线螺钉	Tension post	1
18-7	991001025-7	挑线簧	Take-up spring	1
18-8	991001025-8	挑线簧调节座	Tension post socket	1
19	TC0000053-5	松线钉	Tension releasing L=30mm	1
20	991009013	油泵支柱螺钉	Oil pump support screw	1
21	S044762810	挑线杆防护罩螺钉	Screw SM 3/16x28 L=6	1
22	991001021	挑线杆防护罩	Thread take-up lever cover	1

23	280001036	支脚	Stand bar	4
24	S074374005P	右线勾螺钉	Screw SM 11/64x40 L=6	1
25	991001023G	右线勾	Right line hook	1
26	S115952811	夹线器螺钉	Screw SM 15/64x28 L=7	1
27	280001049	打线勾	Whipping	1
28	288MFL07018	电子夹线器	Electronic wire clamp	1
29	S144762805	螺钉	Screw SM 3/16x28	1
30	280001037	卷边器座	Flange holder	1
31	991001028G	针板	Throat plate	1
32	S044374006Z	针板螺钉	Screw SM 11/64x40 L=6.3	2
33	991001035G	推板组件	Slide plate asm	1
33-1	991001035-1	推板	Slide plate	1
33-2	991001035-2	推板簧	Bed slide spring	1
33-3	S082385602	推板簧螺钉	Screw SM 3/32x56 L=2.2	2
34	S074374005P	左线勾螺钉	Screw SM 11/64x40 L=6	1
35	TC0000144G	左线勾	Arm thread guide left	1
36	S094762809	面板螺钉	Screw SM 3/16x28 L=9	3
37	991001033	橡皮塞	Rubber plug	2
38	299F01001	前面板	Face plate	1
39	299F01002	前面板垫	Panel mat	1
40	S073184404	防油板螺钉	Screw SM 1/8x40 L=4	1
41	991004042	垫片	Gasket	1
42	280001004	面部防油板	Arm oil shifld	1
43	S144374006-1	螺钉	Screw	1
44	S044762810	灯开关组件螺钉	Screw SM 3/16x28 L=6	2
45	GT6L09003	灯开关组件	Lamp switch group	1
46	991001052	油线板组件	Oil plate assembly	1
47	S044762810	塑料线夹螺钉	Screw SM 3/16x28 L=6	2
48	991001061	塑料线夹	Plastic clamp	2
49	991004008	卡簧	Jump ring	1
50	870003033	橡胶垫片	Rubber gasket	1
51	280001027G	松线辅钉	Loose thread auxiliary nail	1
52	288007015G-1	密封垫	Sealing gasket	1
53	288MFL07015G	松线器	Thread release	1
54	M040400705	锥度螺钉	Screw M4	2
55	S094762809	螺钉	Screw SM 3/64x28	9
56	288C01006	后窗板	Rear window panel	1
57	288C01007	后窗板垫	Rear window pad	1
58	S093574016	螺钉	Screw SM 9/64x40 L=12	2
59	991001006	橡皮塞	Rubber plug	1
60	S144374006-1	螺钉	Screw SM 11/16x40 L=6	1
61	S07437065	螺钉	Screw SM 11/64x40 L=6	1
62	991001007G	三眼过线板	Three eyes over the line board	1
63	GT6001021	机壳底板组件	Chassis bottom panel assembly	1

2. 上轴部件、挑线部件


Upper shaft components and Pick wire components

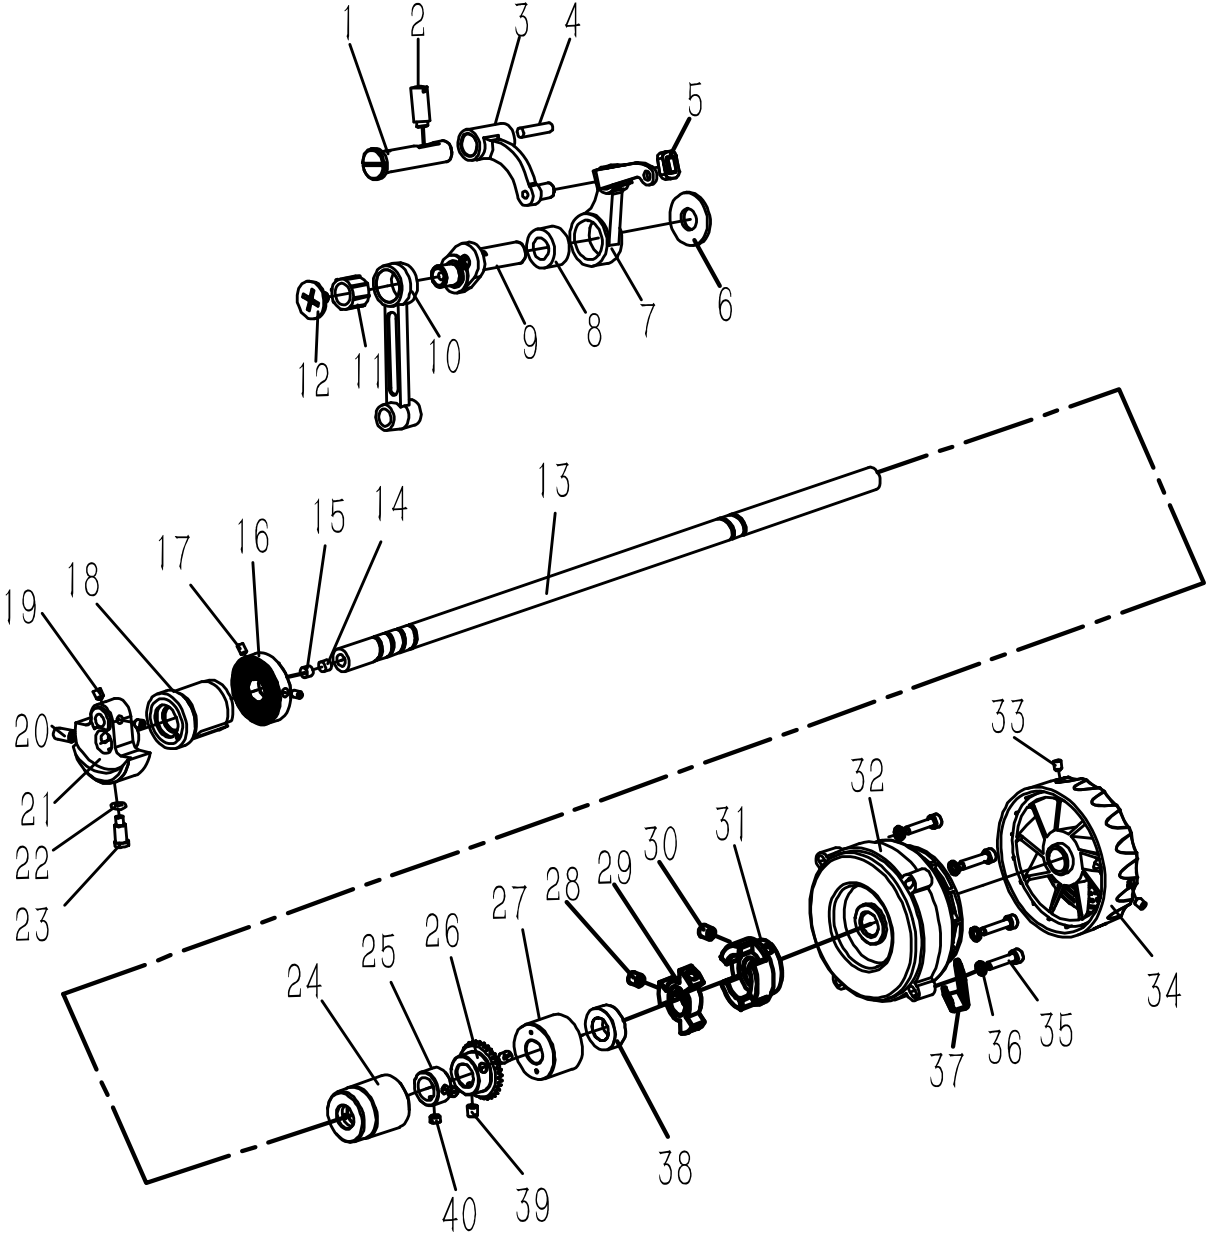

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	991002002	挑线连杆销	Thread take-up crank shaft	1	
2	991002001	挑线连杆销螺钉	Screw SM 15/64x28 L=13	1	
3	991002004H-2	挑线连杆	Pick rod	1	
4	991009008	油线	Oil line	1	
5	991002019	挑线杆橡皮套	Rubber	1	
6	W22081605	垫圈	Gasket	1	
7	991002004	挑线杆	Take-up-lever	1	
8	991002005-2	挑线轴承	Pick bearing	1	
9	991002006	挑线曲柄	Needle bar crank	1	
10	991002007	针杆连杆	Needle bar crank rod	1	
11	991002005-1	挑线杆滚针轴承	Needle bearing	1	
12	991002008	挑线曲柄左旋螺钉	Left screw SM 9/64x28 L=16	1	
13	288MFL02010	上轴	Armshaft	1	
14	280003036-1	油棉	Oil wool	1	
15	030302022	橡皮塞	Rubber plug	1	
16	991009016	绕线驱动轮	Bobbin pulley	1	
17	S144374006	螺钉	Screw SM 11/64x40 L=6	1	
18	991002017	上轴前套	Upper shaft front sleeve	1	
19	S116354006	螺钉	Screw SM 1/4x40 L=6	1	
20	S154374006	螺钉	Screw SM 9/32x28 L=8.5	1	
21	991002009K	针杆曲柄	Needle lever crank	1	
22	991002009-3	O型圈	Rubber ring	1	
23	S077142815	螺钉	Screw SM 9/32x28 L=15	1	
24	870002008	上轴中套	Bushing intermediate	1	
25	991002015	上轴挡圈	Upper shaft retaining ring	1	
26	991003014	上轴伞齿轮	Gear asm	1	
27	288002011	上轴后套	Upper shaft back sleeve	1	
28	M140601008	螺钉	Screw M5	3	
29	991002028	联轴器A	Coupling A	1	
30	M140601006	螺钉	Screw M6	3	
31	991002023	联轴器B	Coupling B	1	
32	40103035	电机	Electrical machinery	1	
33	M140500806	螺钉	Screw M5	3	
34	280002022	手轮	Hand wheel	1	
35	M180500816	螺钉	Screw M5	4	
36	280002014	弹簧垫片	Spring shim	4	
37	280001066-1	导线线夹	Conductor clamp	1	
38	991002013	上轴后套油封	Upper shaft rear sleeve oil seal	1	
39	S116354008	伞齿轮螺钉	Screw SM 1/4x40 L=8	2	
40	S116354006	螺钉	Screw SM 1/4x40 L=6	2	

3. 针杆部件、竖轴部件、下轴部件

Pin, Vertical shaft and Lower shaft assembly

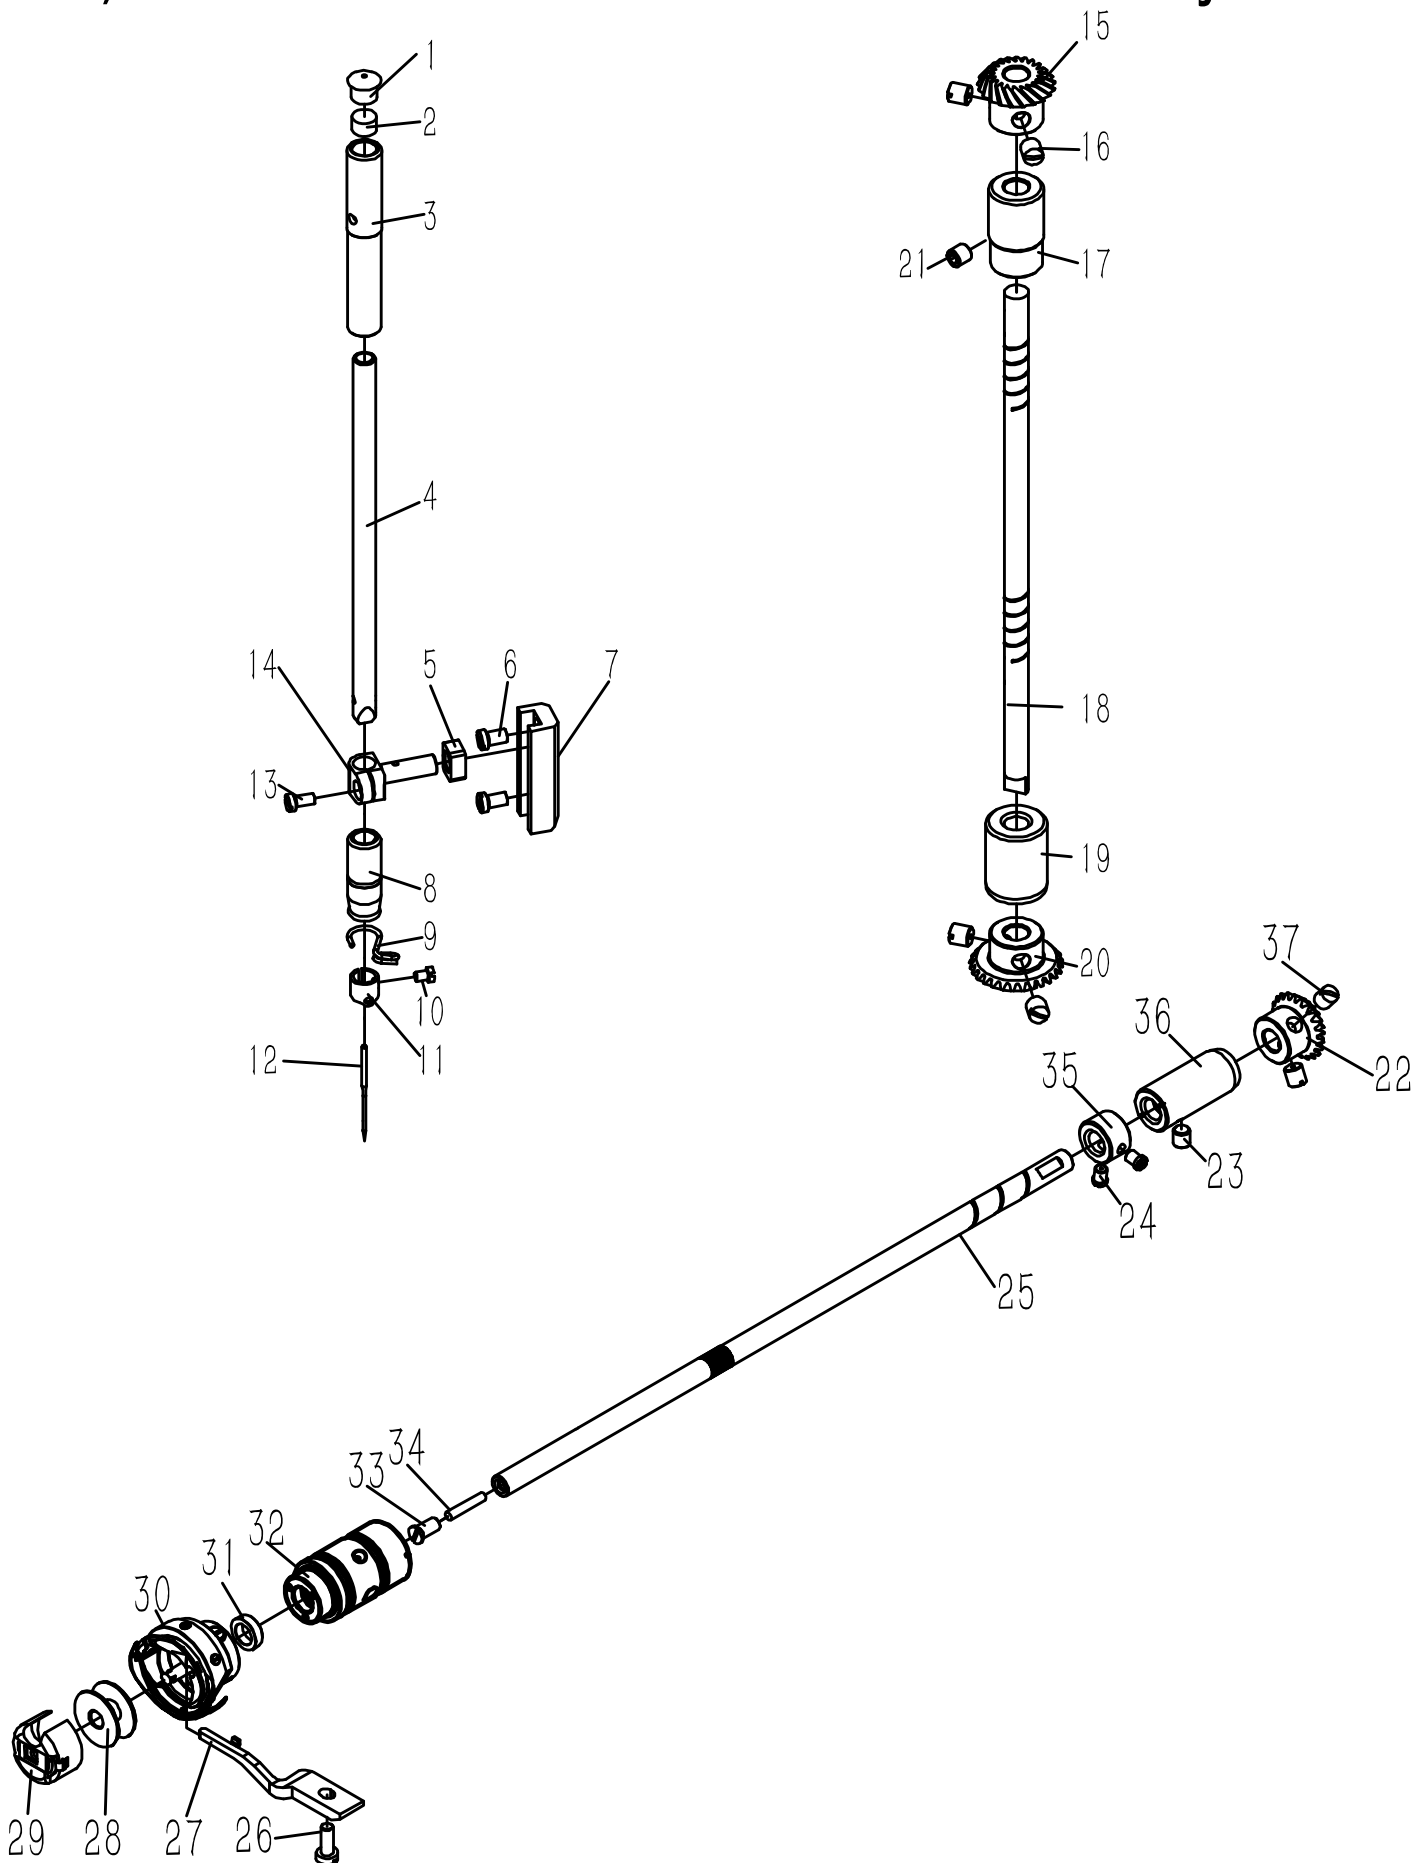


序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	991003001	针杆上孔塞	Cap	1	
2	280003036R	针杆上套油毡	Needle rod covered with linoleum	1	
3	991003002	针杆上套	Needle bar bushing upper	1	
4	991003003DLC	针杆	Needle bar	1	
5	991003032A-1	滑块	Slide block	1	
6	S074374007P	滑块座螺钉	Screw SM 11/64x40 L=7	2	
7	991003032A-2	滑块槽	Silde block base	1	
8	991003008	针杆下套	Needle bar bushing lower	1	
9	991003007M	针杆下套线钩	Needle bar thread guide	1	
10	S083184406	螺钉	Screw SM 1/8x44 L=5	1	
11	991003010G	针杆过线钩	Needle bar thread guide	1	
12	991003011-2	机针	Needle DBx1 #12	1	
13	S073574007	针杆连接柱螺钉	Screw SM 9/64x40 L=6	1	
14	991003036	连接柱	Needle rod holder asm	1	
15	991003016	竖轴上伞齿轮	Pinion asm	1	
16	S116354008	伞齿轮螺钉	Screw SM 1/4x40 L=8	4	
17	991003016-1	竖轴上套	Upright shaft bushing upper	1	
18	991003014-1	竖轴	Upright shaft	1	
19	991003017	竖轴下套	Upright shaft bushing lower	1	
20	991003019	竖轴下伞齿轮	Pinion asm	1	
21	S145952806	竖轴上套紧固螺钉	Screw SM 15/64x28 L=6	1	
22	991003021	下轴伞齿轮	Pinion asm	1	
23	S145952806	下轴后轴套螺钉	Screw SM 15/64x28 L=6	1	
24	S144374006	下轴挡圈螺钉	Screw SM 11/64x40 L=5	2	
25	288MFL03022	下轴	Lower shaft	1	
26	S084374011	定位勾螺钉	Screw SM 11/64x40 L=11	1	
27	991003023	定位勾	Bobbin case holder	1	
28	991003029	梭芯	Bobbin	1	
29	TC00000047	梭壳	Bobbin case	1	
30	991003015Z	旋梭	Hook asm	1	
31	030306031	下轴前套油封	Lower shaft front sleeve oil seal	1	
32	168051401	下轴前套	Lower shaft front metal	1	
33	991003028	下轴限油螺钉	Screw	1	
34	LL1122	油芯	Oil core	1	
35	991003020	下轴挡圈	Thrust collar asm	1	
36	288005019	下轴后套	Bushing rear	1	
37	S116354008	伞齿轮螺钉	Screw SM 1/4x40 L=8	2	

4.

压杆部件


Press rod unit

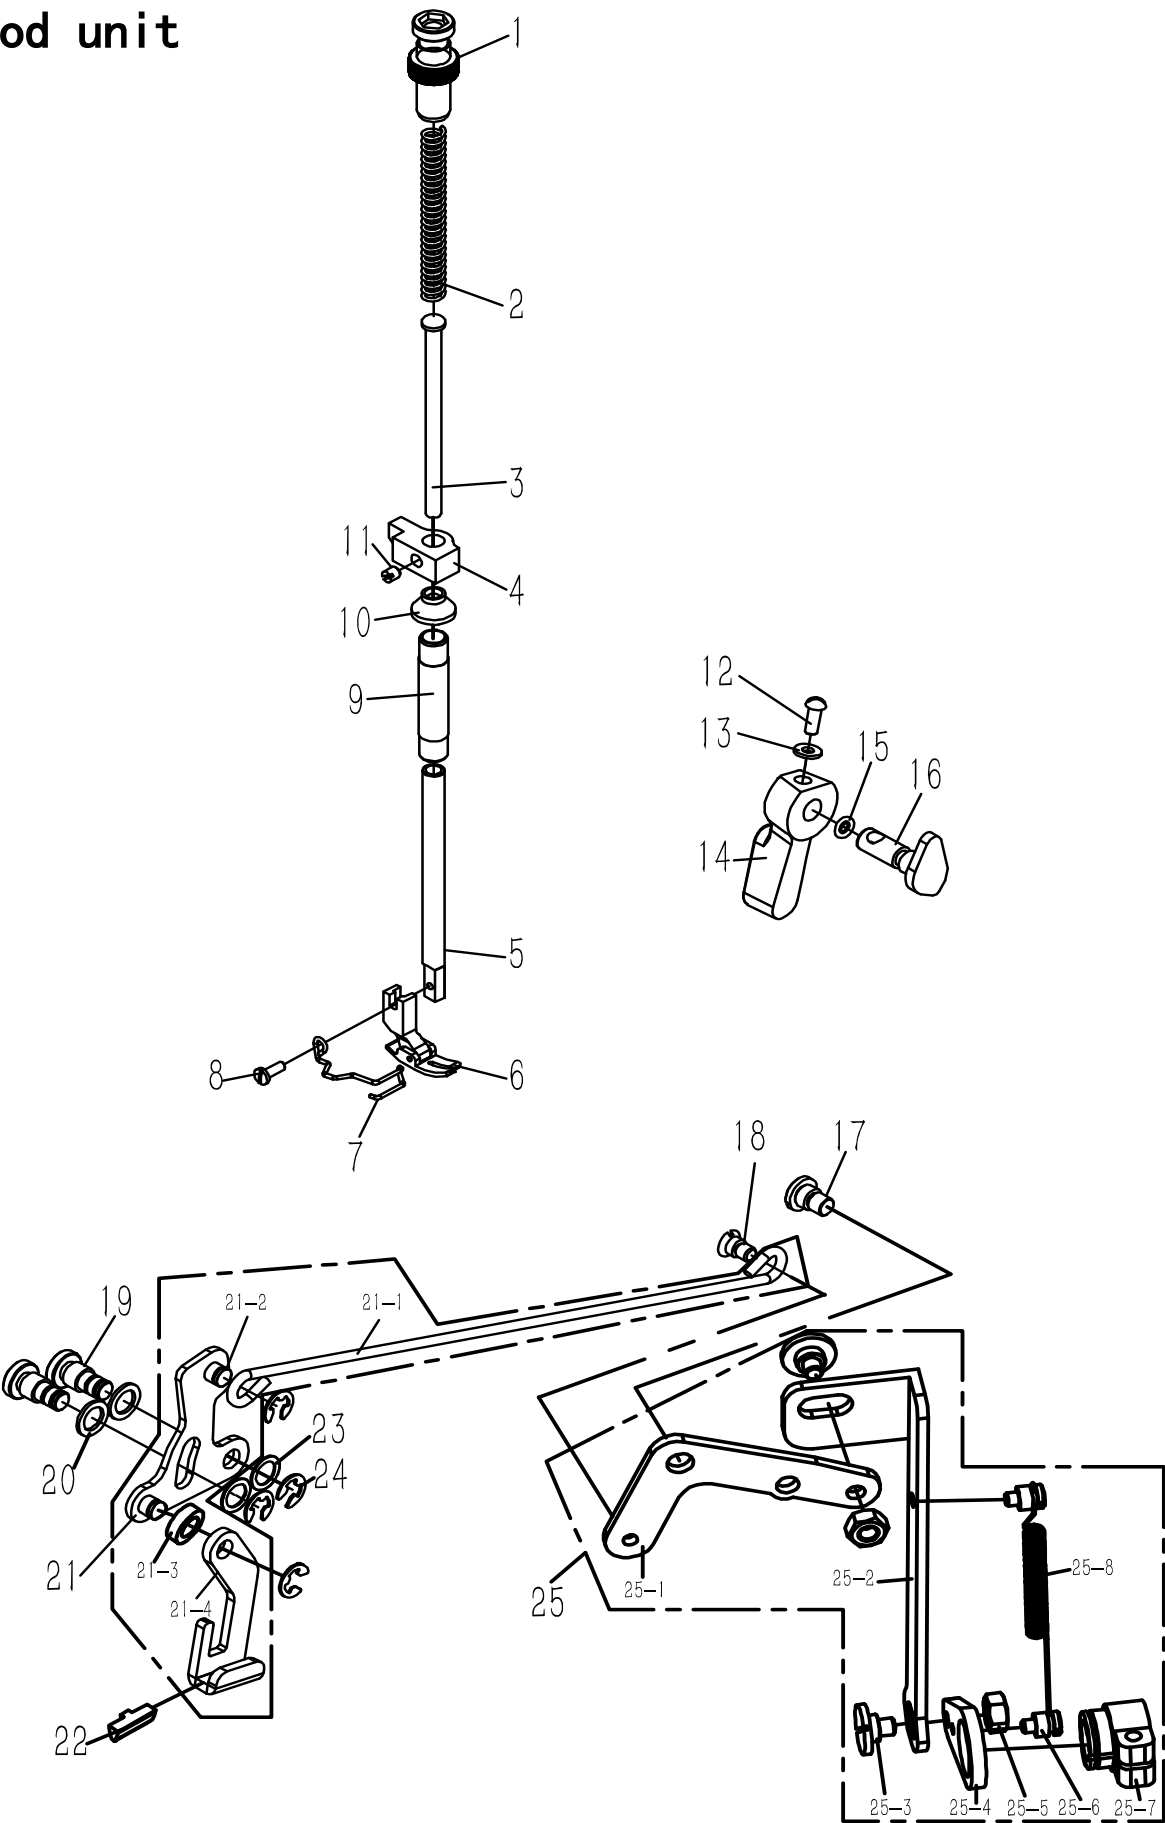

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	991004028A	调压螺母组件	Pressure regulating nut assembly	1	
2	991004029	调压簧	Presser adjuring spring	1	
3	991004033	调压导杆	Presser guide bar	1	
4	280004006	压杆导架	Presser bar guide bracket	1	
5	991004031	压杆	Presser bar	1	
6	991004009	压脚	Presser foot asm	1	
7	991004036	保护架	Presser foot protection frame	1	
8	S073574011	压脚螺钉	Screw SM 9/64x40 L=11	1	
9	991004005	压杆套	Presser bar bushing lower	1	
10	991004041	压杆挡油帽	Oil baffle cap	1	
11	S116354006	导架螺钉	Screw SM 1/4x40 L=6	1	
12	991004002	螺钉	Screw SM 9/64 L=9.5	1	
13	991004042	垫片	Gasket	1	
14	991004001	压脚扳手	Presser wrench	1	
15	991004003	O型圈	Rubber ring	1	
16	LB1112	压脚扳手凸轮	Press foot wrench CAM	1	
17	288003013	轴位螺钉	Shoulder screw	1	
18	991004010	轴位螺钉	Shoulder screw	1	
19	991004007	前杠杆螺纹销	Link shaft	2	
20	991004039-1	红纸垫	Gasket	2	
21	GT6L03007	前杠杆组件	Knee lifting cross rod asm	1	
21-1	GT6L03007-1	抬压脚拉杆	Lift foot pull rod	1	
21-2	280004019-1	抬压脚前杠杆	Lift presser foot front lever	1	
21-3	280004019-4	垫圈	Washer	1	
21-4	991004032-2	压脚升降板	Press foot lift plate	1	
22	115034201	缓冲垫	Cushion pad	1	
23	991002036	垫片	Rubber ring	2	
24	991004008	卡簧	Jump ring	4	
25	GT6001392	抬牙脚曲柄组件	Press foot crank assembly	1	
25-1	11001822	抬压脚后杠杆	Lift press foot back lever	1	
25-2	11001737	抬压脚导向板	Lift foot guide plate	1	
25-3	GT6001392-1	轴位螺钉	Shoulder screw	2	
25-4	11001230	抬压脚顶板	Press foot top plate	1	
25-5	GT6001392-2	螺母	Nut	2	
25-6	11001388	弹簧销	Spring catch	2	
25-7	11001736	抬压脚曲柄	Lift foot crank	1	
25-8	11000219	拉压弹簧	Tension spring	1	

5. 送料部件


Feed part

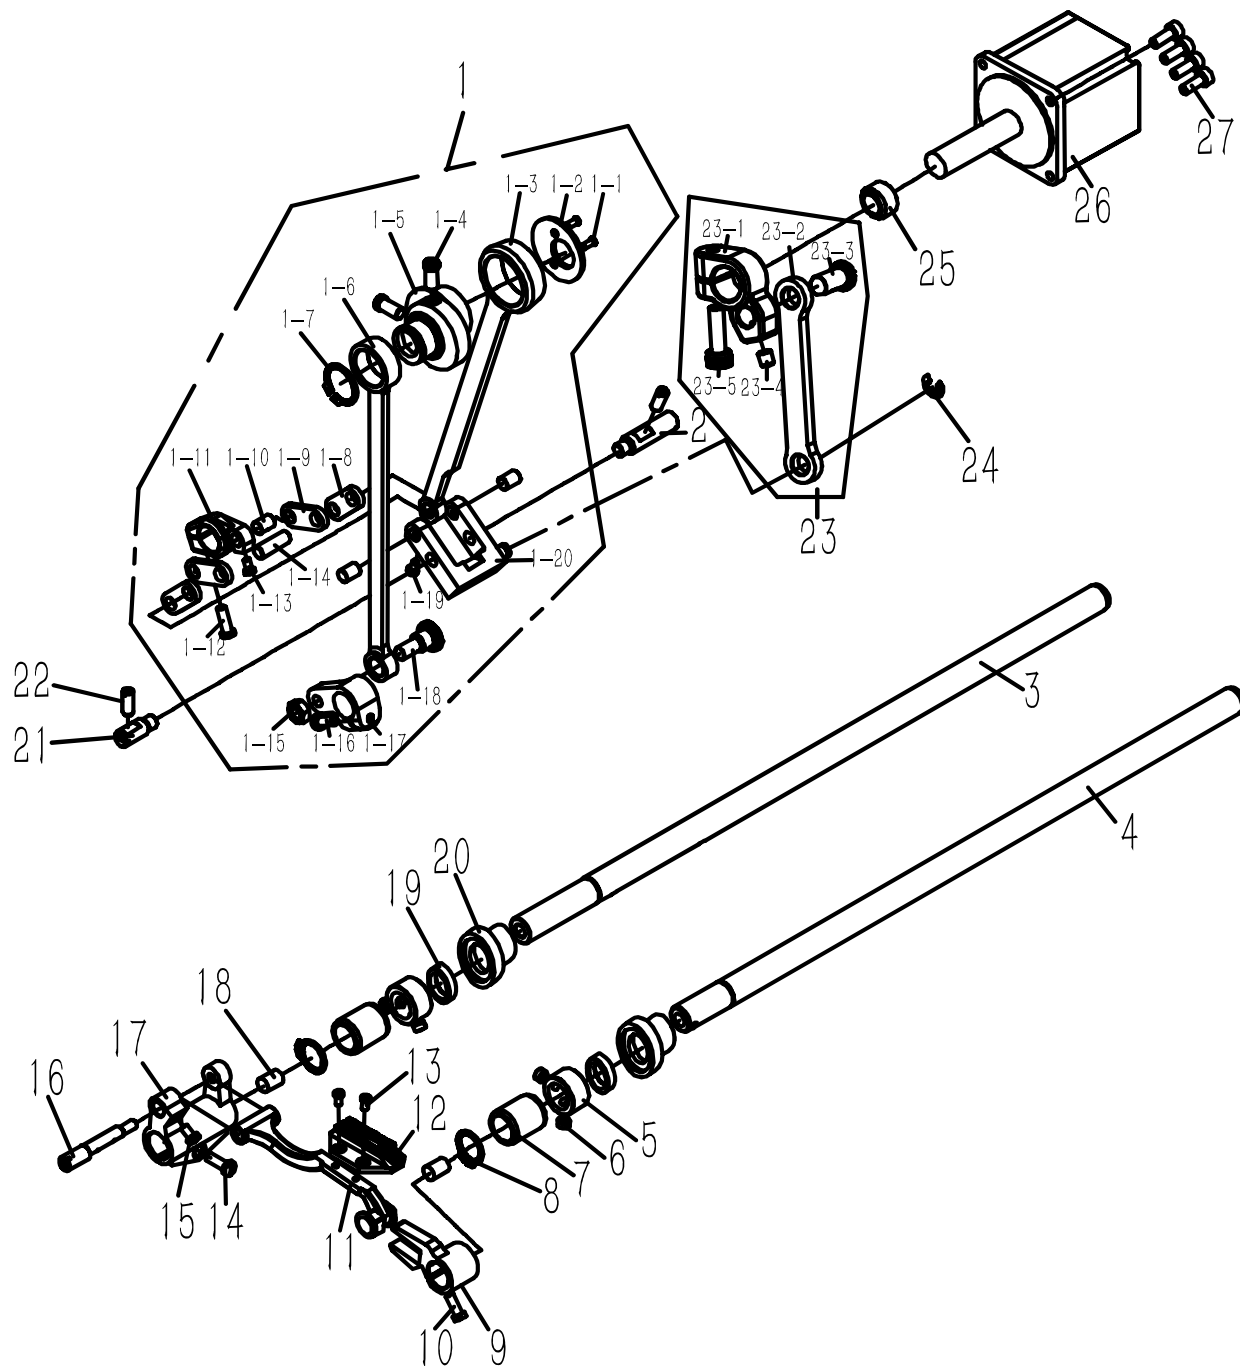

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	730F204025A	大连杆组件	Large connecting rod assembly	1	
1-1	S093574006	送料偏心轮盖板螺钉	Screw SM 9/64x40 L=6	2	
1-2	991002026	送料偏心轮盖板	Cover plate	1	
1-3	991005012	送料连杆	Feed connecting rod	1	
1-4	S07635401	送料偏心轮螺钉	Screw SM 1/4x40 L=11	2	
1-5	991002010-2	送料偏心轮	Feed eccentric	1	
1-6	991005015	抬牙连杆	Lifting rod	1	
1-7	991002014	送料偏心轮挡圈	Stop collar	1	
1-8	991005024	送料短摆动板	Short swing plate	2	
1-9	991005023	送料长摆动板	Long swing plate	2	
1-10	991005038	短摆动板连接销	Short coupling pin	3	
1-11	991005041	送料曲柄	Feed crank	1	
1-12	S074762816	送料曲柄螺钉	Screw SM 3/16x28 L=15	1	
1-13	S073574006	曲柄销螺钉	Screw SM 9/64x40 L=8	1	
1-14	730F204025A-1	摆动座长销	Long coupling pin	1	
1-15	N217142805	抬牙连杆轴位螺母	Nut	1	
1-16	S074762814	抬牙后曲柄螺钉	Screw SM 3/16x28 L=15	1	
1-17	991005043	抬牙后曲柄	Lift back crank	1	
1-18	991005045	抬牙连杆轴位螺钉	Hinge Screw	1	
1-19	S083574004	送料连杆螺钉	Screw SM 9/64x40 L=4	1	
1-20	288004025E	送料摆动座	Feed swing seat plate	1	
2	288004013	摆动座右销	Swing seat right pin	1	
3	288MFL04026	送布轴	Feed spool	1	
4	288MFL04039	抬牙轴	Feed driving shaft	1	
5	991002015	挡圈	Check ring	2	
6	S126354004	螺钉	Screw SM 1/4x40 L=6	4	
7	991005049	送布,抬牙轴前套	Feed cloth, lift axle front cover	2	
8	991005030	轴位卡簧	Shaft position circlip	2	
9	991005054	牙叉	Fork	1	
10	S204374012	牙叉螺钉	Screw SM 11/64x40 L=12	1	
11	991005033DG	牙架部件	Feed bar asm	1	
12	991005031	送布牙	Feed dog	1	
13	S073184406	送布牙螺钉	Screw SM 1/8x44 L=6	2	
14	S074762812	牙架座螺钉	Screw SM 11/64x40 L=12	1	
15	S084374007	牙架销螺钉	Screw SM 11/64x40 L=7	1	
16	991005029	牙架偏心销	Bracket eccentric pin	1	
17	991005052G	牙架曲柄	Dental crank	1	
18	2880003036	羊毛毡	Wool felt	2	
19	280005062	油封	Oil seal	2	
20	288004030	送布抬牙中套	Send cloth lifting braces	2	
21	991005026	摆动座左销	Swing seat left pin	1	
22	991002001	螺钉	Screw SM 15/64x28 L=15	1	
23	GT6001391	倒送料曲柄组件	Backfeed crank assembly	1	
23-1	GT6001391-1	倒送料曲柄	Backfeed crank	1	
23-2	GT6001391-2	倒送料连杆	Backfeed connecting rod	1	
23-3	GT6001391-3	倒送料曲柄销	Reverse feed crank pin	1	
23-4	M140500806	螺钉	Screw M5 L=6	1	
23-5	M180500816	螺钉	Screw M5 L=16	1	
24	288004040	卡簧	Jump ring	1	
25	500015011	油封	Oil seal	1	
26	40103185	倒缝步进电机	Stepping motor	1	
27	M180400714	螺钉	Screw M4 L=14	1	

6. 剪线部件(单刀)


Wire cutting unit(single blade)

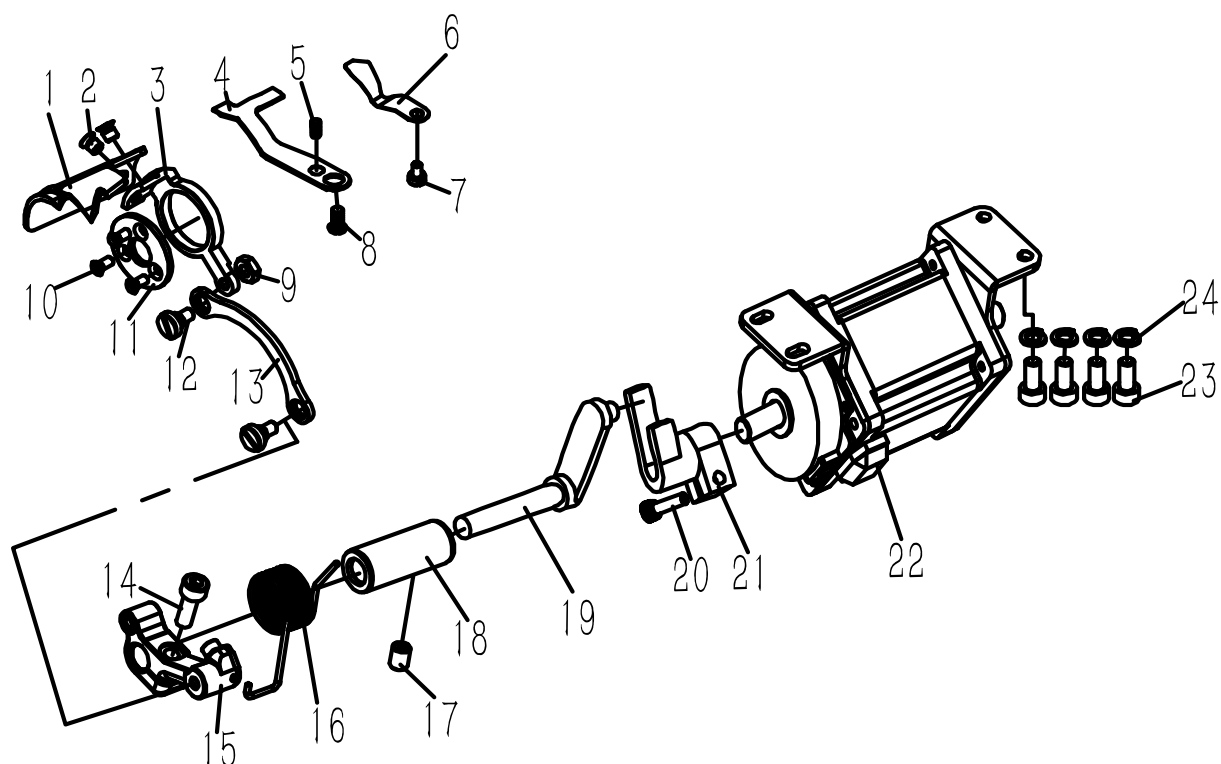

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	991006005	动刀	Moving blade	1	
2	991006004	螺钉	Screw	3	
3	288CS6001	刀架	Knife holder	1	
4	991006009B	固定刀	Dead knife	1	
5	S123574014	定刀调节螺钉	Screw	1	
6	288E06040	分线片	Distributor plate	1	
7	S073574006-1	螺钉	Screw SM 9/64x40	1	
8	S043574005	螺钉	Screw	1	
9	N210330703	螺母	Nut	1	
10	M040300506	螺钉	Screw	3	
11	280006007	刀架压板	Tool rest press plate	1	
12	280006011	轴位螺钉	Shoulder screw	2	
13	288CS6009	刀架连杆	Tool rest connecting rod	1	
14	S184763214	螺钉	Screw	1	
15	280006012	剪线限位曲柄	Cut wire limit crank	1	
16	280006015	复位簧	Reset spring	1	
17	S145952806	螺钉	Screw	1	
18	GT6006016	切线轴套	Tangential shaft sleeve	1	
19	10132344	剪线驱动曲柄	Cut wire drive crank	1	
20	M180500820	螺钉	Screw M5	1	
21	11000549G	剪线叉形曲柄	Cutting fork crank	1	
22	40103306	电机(30)	Electrical machinery	1	
23	M180500814	螺钉	Screw	4	
24	280002014	垫片	Gasket	4	

7. 油盘部件

Oil pan unit

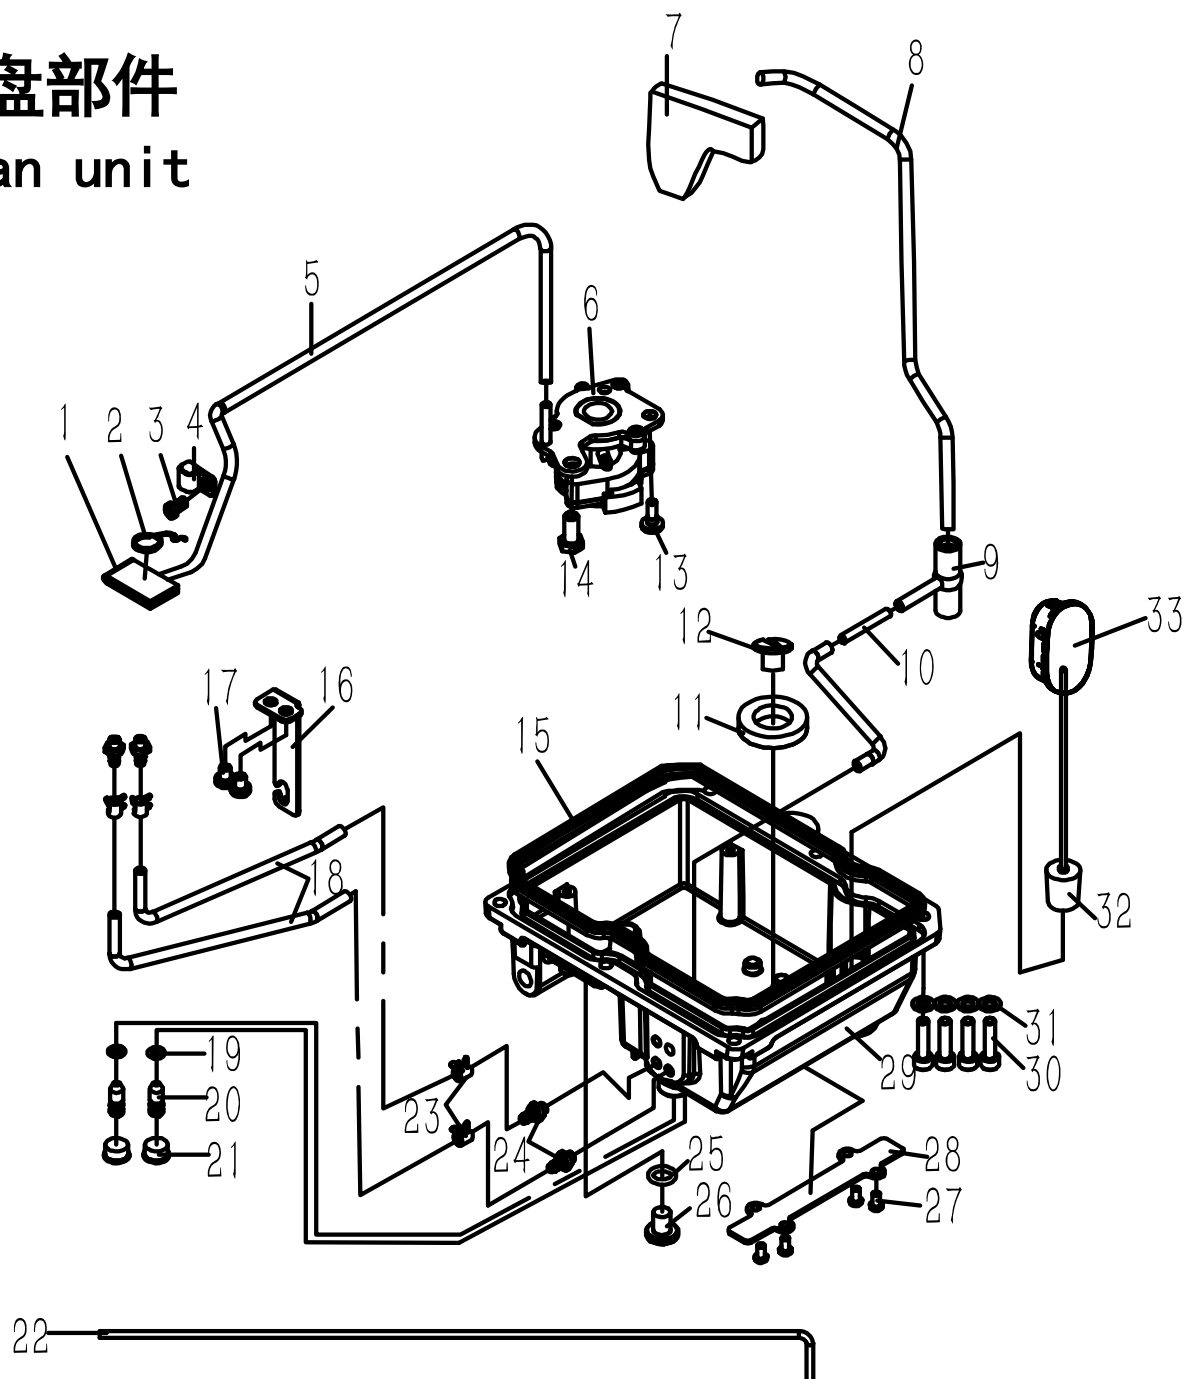


序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	991009019	回油毡	Recycled felt	1	
2	991009005	回油毡夹	Return the linoleum clip	1	
3	S044762810	螺钉	Screw SM 3/16x28 L=10	1	
4	991009007	回油管夹	Return pipe clamp	1	
5	991009006	回油管	Oil return pipe	1	
6	288009014	油泵组件	Oil pump group	1	
7	GT6007007	挡油海绵	Oil sponge	1	
8	750F208003	上供油管	Upper supply line	1	
9	991009015	油管接头	Oil pipe joint	1	
10	280009012	小油管	Small oil pipe	1	
11	TC0000283	磁铁	Magnet	1	
12	S077942407	螺钉	Screw	1	
13	S074374010	螺钉	Screw	1	

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
14	ZSD15005	螺钉	Screw	1	
15	288006018	油箱密封垫	Oil box gasket	1	
16	380082801	油管支架	Tubing support	1	
17	M180500812	螺钉	Screw M5 L=10	1	
18	1199279	油管	Pipeline	2	
19	0000660015	O型圈	O—ring	2	
20	380082101	调油螺钉	Screw	2	
21	288001029	橡皮塞	Rubber plug	2	
22	9910090080	油线	Oil line	2	
23	288006023	油管夹	Tubing clamp	4	
24	280010028	油嘴	Glib	4	
25	TC0000282	O型圈	O—ring	1	
26	S077932811	螺钉	Screw	1	
27	S093574005	螺钉	Screw	4	
28	288006029	电线压板	Wire clamp	1	
29	GT6006021	油盘组件	Oil pan group	1	
30	M180500820B	螺钉	Screw	4	
31	280002014	垫片	Gasket	4	
32	288006017	浮球组件	Float assembly	1	
33	288006011	油量视窗	Fuel window	1	

8. 电控部件


Electronic control unit

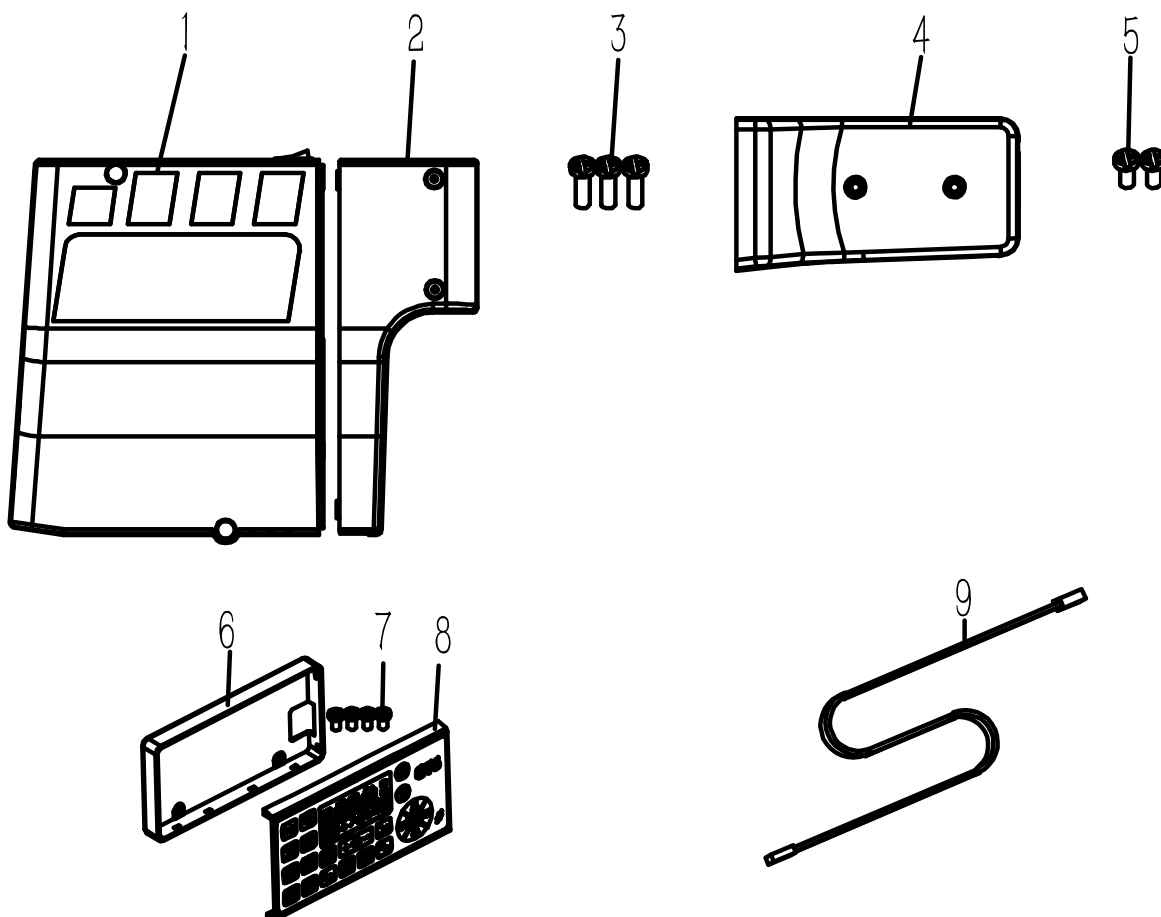

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	40208072	电控	Electronic control	1	
2	10118224	电控侧盖	Electronic controlled side cover	1	
3	S094762818	螺钉	Screw SM 3/16x28 L=18	3	
4	288009004	线盒	Wire box	1	
5	S094762809	螺钉	Screw SM 3/16x28 L=9	2	
6	40303206-1	操作盒下盖	Operating box lower cover	1	
7	S073574006-1	螺钉	Screw SM 9/64x40 L=6	1	
8	40303206	显示屏	Viewing screen	1	
9	288C10005G	显示屏转接线	Screen adapter	1	

9. 过线架部件


Cable tray components

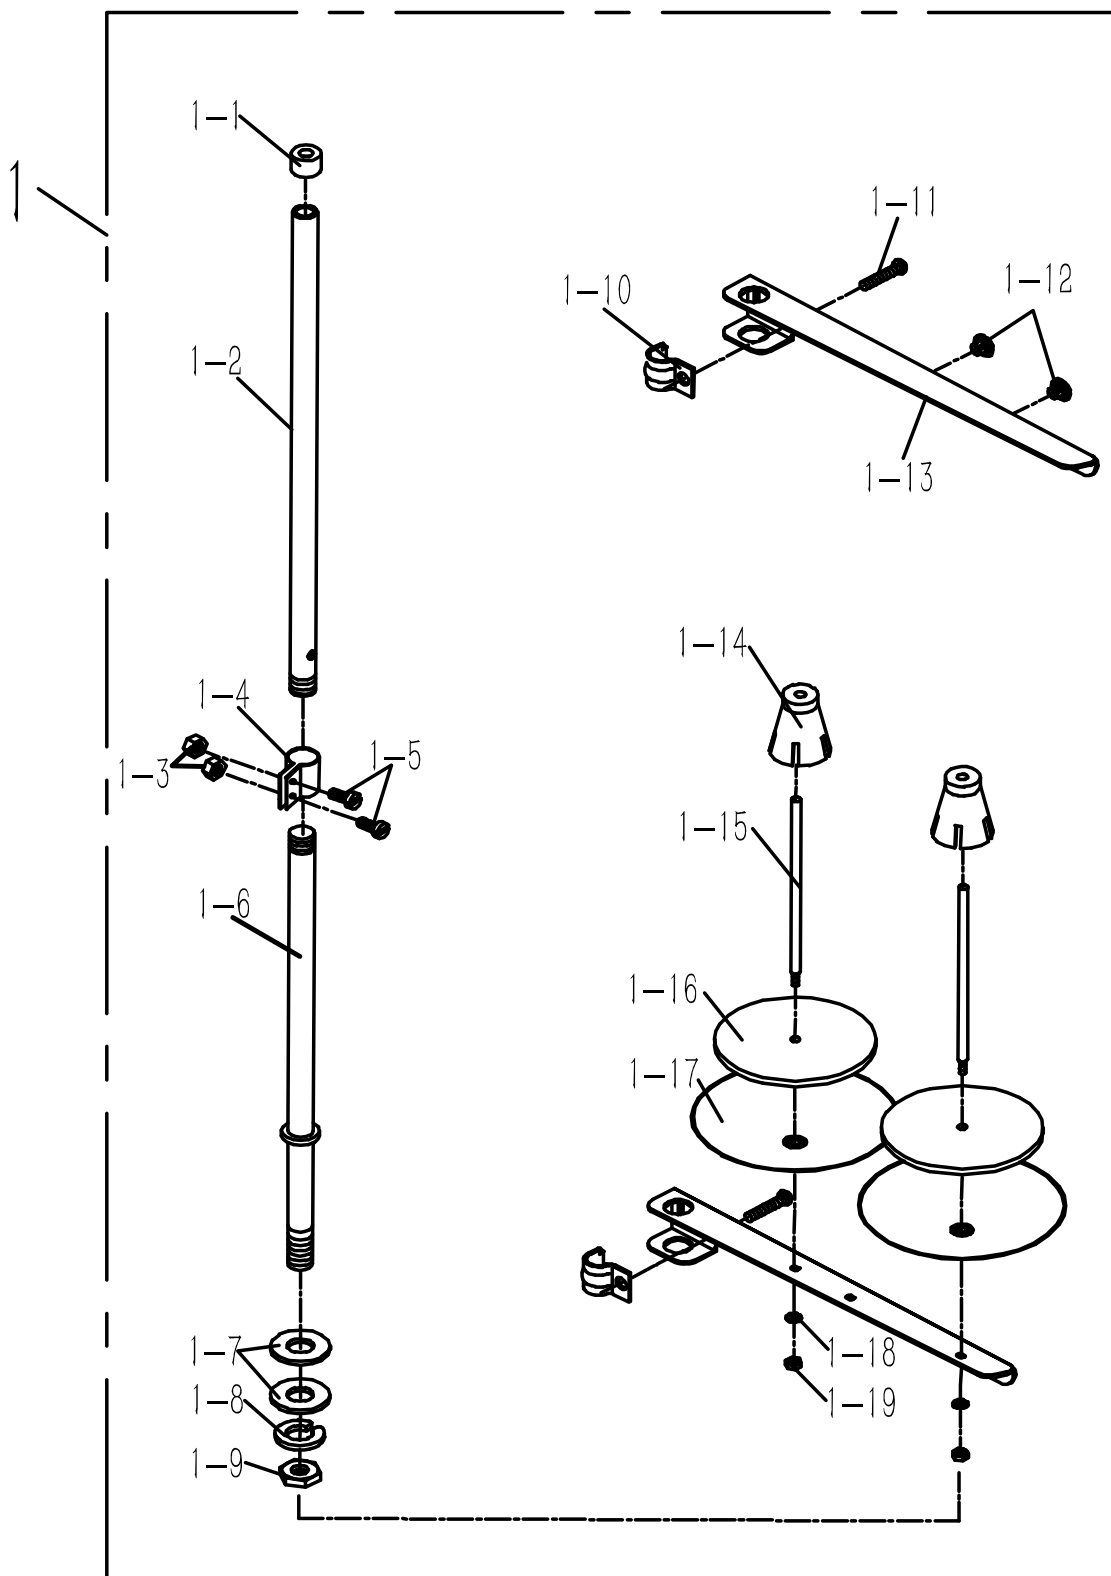

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	991013001	过线架部件	Thread stand asm	1	
1-1	991013008	线架杆顶防护橡皮	Spool rest rod rubber cap	1	
1-2	991013010	线架杆上节	Spool rest rod upper	1	
1-3	N210500805	接架杆接头螺母	Nut M5	2	
1-4	991013011	接架杆接头	Spool rest rod joint	1	
1-5	M090500814	接架杆接头螺钉	Screw M5x14	2	
1-6	991013014	线架杆下节	Spool rest rod lower	1	
1-7	991013019	线架杆紧固螺母垫圈	Washer 16x30x2.6	2	
1-8	991013020	紧固螺母弹簧垫圈	Spring washer	1	
1-9	991013018	线架杆紧固螺母	Nut M6x1.5	1	
1-10	991013007	线架过线夹	Thread guide arm joint	2	
1-11	M090601016	线夹过线夹螺钉	Screw M6x16	2	
1-12	991013015	过线圈	Thread guide	2	
1-13	991013009	线架过线杆	Spool rest arm	2	
1-14	991013002	线团防松垫	Spool retainer	2	
1-15	991013003	线盘钉	Spool pin	2	
1-16	991013004	线盘轮垫	Spool rest cushion	2	
1-17	991013005	线盘	Spool rest	2	
1-18	991013016	线盘钉弹簧垫	Spring washer	2	
1-19	991013017	线盘钉螺母	Nut M5	2	

10. 附件

Accessories

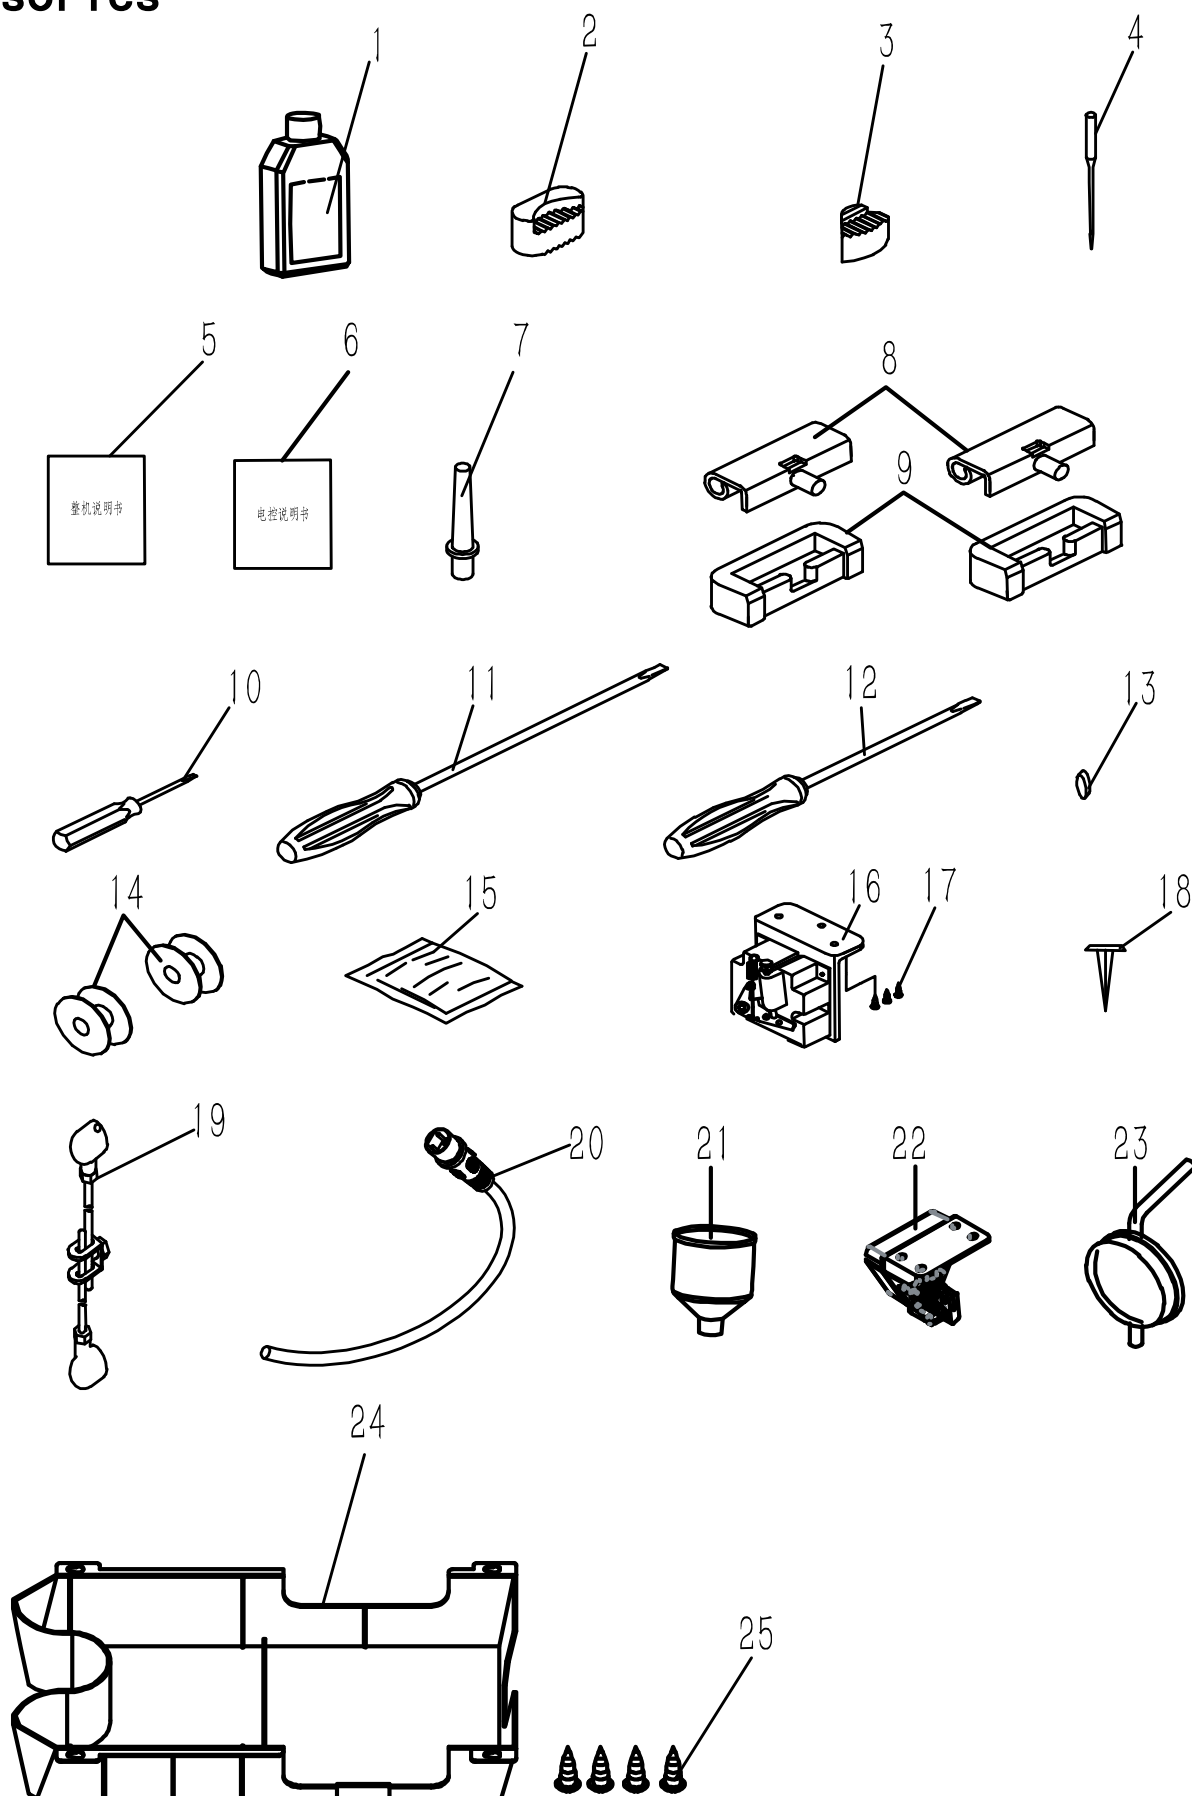

序号 Ref.No.	新图号 new part No.	名称 Part name	Name of parts	数量 Qty	备注 Note
1	0403036	油壶组件	Oil reservoir asm	1	
2	280014012	防震垫A	Vibration isolation pad A	2	
3	280014013	防震垫B	Vibration isolation pad B	2	
4	910003011-2	机针DBx1 #12	Needle DBx1 #12	2	
5	GT6011005	整机说明书	Machine specification	1	
6	GT6011006	电控说明书	Electronic control manual	1	
7	288011012	机头支柱	Head strut	1	
8	991014001	机头连接钩	Head connection hook	2	
9	991014003	机头连接钩座	Head connecting hook seat	2	
10	991014006	螺丝刀 (小)	Screw driver(small)	1	
11	991014005	螺丝刀 (中)	Screw driver(medium)	1	
12	991014004	螺丝刀 (大)	Screw driver(large)	1	
13	TC0000279	磁铁	Magnet	1	
14	991003029	梭芯	Cop latch	2	
15	991014008	机头罩	Bow cap	1	
16	990000002A	琦星控速器	Speed controller	1	
17	991014018	控速器安装螺钉	Screw SM 15/64x28 L=10	3	
18	991014002	座钉	Nail	8	
19	991014019	控速器拉杆	Speed controller pull rod	1	
20	990000010	国标三扁插(琦星对接)	Electric wire	1	
21	900027007	加油漏斗	Priming funnel	1	
22	288011018	电子膝靠组件	Electronic knee rest assembly	1	
23	030310015	膝控组件	Knee control unit	1	
24	288MFL15019	托盘	Pallet	1	
25	991014018	安装钉	Pilot nail	4	

NOTES

[illegible]

Dealer:

The Texi logo, featuring a stylized purple flower icon followed by the word "texi" in a lowercase, italicized, purple serif font.