



BATTISTELLA®

MACCHINE PER STIRARE
IRONING EQUIPMENT

Instructions and maintenance

ERA mod. 2010

ERA BLOWING mod. 2010

ERA VAP mod. 2010

ERA MAX VAP mod. 2010

BATTISTELLA B.G. S.r.l.

Via Bessica, 219 36028 Rossano Veneto (VI) ITALY ☎ : +39-0424-549027
📠 : +39-0424-549007 🌐 : www.battistellag.it ✉ : info@battistellag.it

This manual is property of BATTISTELLA B.G. S.r.l. We reserve the right to make changes without notice. All rights reserved.

INDEX

1. SPECIFICATIONS.....	2
2. IMPORTANT.....	3
3. OPENING OF PACKAGE	3
4. WATER CONNECTION	4
5. ELECTRICAL CONNECTION.....	4
6. ELECTRONIC CARD OPERATION: "STANDARD" & "STAND-BY" MODE	5
7. USE OF KEYS.....	5
8. MEANING OF ICONS	7
9. STARTING.....	7
10. WATER CHARGING ICONS	8
11. WARNINGS.....	9
12. SET MENU.....	9
13. MAINTENANCE RESET.....	10
14. CONTROL AND SUBSTITUTION OF FUSES	10
15. GENERAL WARNINGS	11
16. IRONING	12
17. BOILER DISCHARGE	13
18. ELECTRICAL RISKS.....	13
19. MECHANICAL RISKS	14
20. THERMAL RISKS	14
21. INTERVENTIONS AND SMALL REPAIRS.....	14
22. CLEANING OF THE WATER FILTER	14
23. CLEANING OF THE BOILER PROBE.....	15
24. COMPULSORY PERIODICAL MAINTENANCE	15
25. PACKING	16
26. TRANSPORT.....	16
27. STORAGE	16
28. WARRANTY TERMS	16
29. DISPOSAL.....	17

INSTRUCTIONS AND MAINTENANCE

ERA-ERA BLOWING-ERA VAP-ERA MAX VAP


Before starting the machine, carefully read this manual and follow the instructions.

Never use the product in any way other than that indicated in this manual.

1. SPECIFICATIONS

MODEL:	ERA	ERA BLOWING	ERA VAP	ERA MAX VAP
POWER SUPPLY:	400 V+N-50Hz	400 V+N-50Hz	400 V+N-50Hz	400 V+N-50Hz
TOTAL INSTALLED POWER:	6248 W	6414 W	8500 W	8666 W
IRON POWER:	800 W	800 W	800 W	800 W
BOILER POWER:	4000 W	4000 W	5200 W	5200 W
BOARD POWER:	800 W	800 W	1100 W	1100 W
SUCTION POWER:	0,5 Hp	0,5 Hp	0,5 Hp	0,5 Hp
BLOWING POWER:	-	0,2 Hp	-	0,2 Hp
PUMP POWER:	48 W	48 W	0,7 Hp	0,7 Hp
BOILER CAPACITY:	6 L	6 L	6 L	6 L
IRONING ENDURANCE:	CONTINUOUS	CONTINUOUS	CONTINUOUS	CONTINUOUS
OPERATING STEAM PRESSURE:	4 BAR	4 BAR	5 BAR	5 BAR
WEIGHT:	72 kg	82 kg	72 kg	86 kg
OVERALL DIMENSION FOR ALL MODELS:	61x140x93 h.cm			
IRONING ARM POWER (upon request):	150 W	150 W	150 W	150 W

MADE IN ITALY

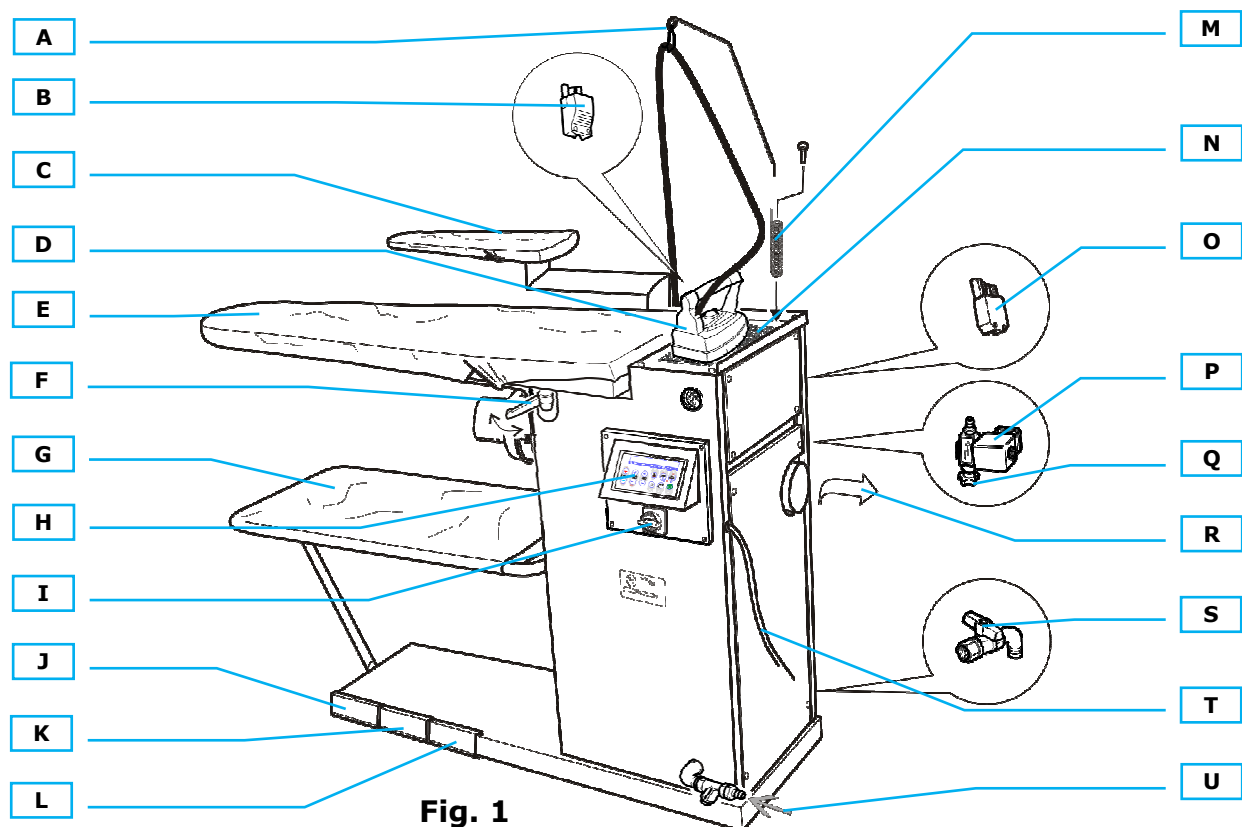




LEGENDA			
A	Cable support hook	L	Steam pedal (steaming version)
B	Arm socket	M	Cable support
C	Sleeve ironing arm (upon request)	N	Rubber iron rest
D	Iron	O	Iron socket
E	Cover (Prontotop)	P	Solenoid valve
F	Suction deviation damper (Era vap)	Q	Solenoid valve knob
G	Linen support	R	Air/steam discharge
H	Electronic board control panel	S	Discharge tap
I	Main switch	T	Electric cable
J	Suction pedal	U	Water inlet hose-holder
K	Blowing pedal (blowing version)		

2. IMPORTANT

It is the operator's responsibility to carefully follow the instructions written in this manual to better use and preserve the machine and avoid injuries to people or damage to things.

This ironing board is not suitable for people (children included) with physical or mental handicaps or inexperienced persons, unless they are instructed by a person who takes the responsibility for their safety. Children must not play with the ironing board.

Labels have been put on some parts of the machine in order to identify the crucial points. The meanings of the labels are as shown below:

	Hot surface. Accidental burns. Pay attention.
	High voltage. Electrocutation risk. Pay attention not to touch high voltage parts. Disconnect the machine from the power grid before removing the protection panels.
	Indicates the presence of the boiler discharge tap. Caution steam output - boiling water! Danger of burns. Follow the instructions indicated in the manual to safely discharge the water from the boiler.

3. OPENING OF PACKAGE

1. Open the box containing the machine from the upper side marked as ALTO ↑ and read carefully the following instructions (take care of this manual for further reference).
2. Remove the ironing board from the box.
3. Remove the protection film (nylon) from the iron rest.
4. For models equipped with ironing arm, insert the arm (fig. 1-C) and fix it by screwing the respective knobs. Insert the plug of the arm in the specific socket (fig. 1-B).

5. Fix the cable support in the specific hole (fig. 1-M), connect the iron plug to the socket (fig. 1-O) and fix the steam hose to the solenoid valve with a hose clamp (fig. 1-P).
6. Fix the iron cables to the cable support hook (fig. 1-A), paying attention to avoid twisting.
7. Place the iron on the rubber iron rest (fig. 1-N).

4. WATER CONNECTION

Connect the machine to the aqueduct. The water pressure must not exceed 2,5 BAR otherwise the pump get stuck and so also the water entrance.

For connection, check that there is a tap nearby and a rubber hose that resists the aqueduct pressure. The rubber hose must be inserted and fixed onto the "WATER INLET HOSE-HOLDER" of the machine - diameter 10 mm (fig. 1-U) by using two hose clamps.

Note: before connecting the machine to the aqueduct, discharge a few liters of water to clean the system pipes.

If a water connection is not possible and the machine requires a water tank, ask the manufacturer or dealer about the changes to be made.

It is recommended to use only drinking water. Do not use distilled water or with a hardness less than 12°f, as this type of water causes malfunctions in the machine (corrosion, dark water from the iron, etc. ...).

If the water is excessively hard (more than 20° f) it is recommended to install a water softener that reduces dissolved salts in water.

Once ironing is finished, close the water tap and remember to open it before turning on the machine.

Caution: do not use the machine with the water tap closed otherwise the pump would be irreparably damaged.

5. ELECTRICAL CONNECTION

Connect the machine to a protected socket with earth protector switch, with observance of the law in force and a voltage suitable to the ironing board.

Be sure the voltage and power frequency correspond to what is written on the label placed on the machine.

It is compulsory to connect the equipment to a good ground wire and the connection has to be done by qualified personnel.

The machine is supplied with electric cable. Match the colours above to connect the machine cable to the electrical system/plug.

NEUTRAL	→	BLUE
PHASE L1	→	BROWN
PHASE L2	→	GREY
PHASE L3	→	BLACK
GROUND	→	YELLOW/GREEN

6. ELECTRONIC CARD OPERATION: "STANDARD" & "STAND-BY" MODE

By turning on the main switch, the machine is in "*stand-by*" mode (red led on). This mode allows access to the SET menu in order to set functions (e.g.: language, periodical maintenance warnings etc. – see chapter SET MENU).



Electronic card in **stand-by mode**. If maintenance should be required the following warning "MAINTENANCE SUGGESTED" or "SERVICE NEEDED" will appear on the display.
The warning will disappear once the reset procedure has been done.

By pressing the green start key, the machine is in standard mode. This allows to set the ironing functions (e.g.: temperature of ironing board, speed of vacuum-blowing motors, iron functioning etc...).




Start key. Electronic card in **standard mode**.

To temporarily turn off the machine you may press the start key: the machine will go into stand-by mode and the red led will turn on. However, the electronic card will continue to receive power from the mains supply.

At the end of each working day we suggest to always turn the machine off by using the main switch (fig. 1-I).

7. USE OF KEYS



"Ironing board temperature" increase and decrease keys. Adjustable from 0° C to 90° C (or from 0° C to 120° C on steaming models). Upon pressing one of the keys, the set temperature will be displayed (IRONING BOARD TEMP. SETTING). If no key is not pressed after 5 seconds, the real temperature of the ironing board will be displayed ("IRONING BOARD TEMPERATURE").
WITHIN THE MENU: it allows to scroll through the different settings.



"Vacuum speed" increase and decrease keys. Adjustable from position 0 (motor turned off) to position 5 (maximum speed).
"VACUUM SPEED" will be displayed together with the set speed.



By pressing the key for 5 seconds the maintenance will be reset.
WITHIN THE MENU: it allows to reset the partial hour-counter and other parameters.



"Blowing speed" increase and decrease keys. Adjustable from position 0 (motor turned off) to position 5 (maximum speed).
"BLOWING SPEED" will be displayed together with the set speed.
NOTE: some models may not be supplied with all 6 adjustable positions.



"Boiler" on/off key. When the boiler is functioning, the led is on.



"Light" on/off key (accessory available upon request). When the light is functioning, the led is on.



"Steam pistol" or "steam brush" on/off keys (accessory available upon request). When the pistol or brush are functioning, the led is on.



"Iron 1" on/off key. When the iron is functioning, the led is on.
WITHIN THE MENU: it allows to exit from the current function.













"Iron 2" on/off key (accessory available upon request). When the iron is functioning, the led is on.
WITHIN THE MENU: it allows to confirm the selected function.



WITHIN THE MENU: by pressing both keys simultaneously, it allows to enter and exit the set menu.

8. MEANING OF ICONS

	<p><u>ON</u>: it means that the water inside the boiler is being heated in order to obtain the correct operating pressure.</p> <p><u>OFF</u>: it means that the boiler has reached the optimum pressure. The machine is ready to iron.</p>
	Indicates that the water is being pumped into the boiler.
	<p><u>ON</u>: it means that the ironing board is being heated in order to reach the set temperature.</p> <p><u>OFF</u>: it means that the ironing board has reached the set temperature.</p>
	Indicates that the pump is blocked because it has failed to restore the correct water level to the boiler (see chapter "WATER CHARGING ICONS").
SET	Indicates that the operator is within the SET menu where it is possible to modify the different settings (see chapter "SET MENU").
	Indicates a malfunctioning of the temperature probe of the ironing board (see chapter "WARNINGS").
	Indicates that the maximum number of hours recommend for the replacement of the cover has been reached. Replace the cover and reset the warning (see chapter "MAINTENANCE RESET").
	Indicates that the maximum number of hours recommend for the cleaning of the water filter has been reached. Clean the water filter and reset the warning (see chapter "MAINTENANCE RESET").
	Indicates that the maximum number of hours set for the general maintenance of the machine has been reached. <u>Contact the manufacturer or authorized service centre for this intervention.</u>
	Indicates that the maximum number of hours recommend for the cleaning of the boiler's probe has been reached. Clean the probe and reset the warning (see chapter "MAINTENANCE RESET").
	Indicates an anomalous overheating of the boiler (see chapter "WARNINGS").

9. STARTING



It is recommended to discharge water from the boiler before switching it on for the first time, as well as every time the machine is put into operation after it has not been used for more than one week. This operation allows the boiler to be rinsed so as to eliminate any deposits and to prevent dark water from coming out of the iron during ironing.

1. Set the main switch on 1 (fig. 1-I).


2. Turn on the electronic card (green key) and activate the required functions.
The settings of the electronic card are memorized every time the main switch is turned off. Once the machine is turned on again, it will start with the settings memorized before the machine was turned off (e.g. if the boiler was on, it will be on upon switching on the machine).


NOTE: the electronic card automatically performs a check of the software installed. This is why it takes 2 seconds for the machine to turn on.

If an error or fault is found, the "safety" device blocks the electronic card and does not allow normal functioning. "SOFTWARE UPDATE NEEDED" will be displayed. Contact the authorized service center to update the software.

3. Wait until the boiler light  is off. Take the iron by the cork handle, point it towards the floor and press the micro-switch of the iron (fig. 2) 4 or 5 times, so that steam comes out. This procedure must be carried out in order to heat up the steam hose and avoid water coming out of the iron. To adjust the steam flux, you must work on the knob of the solenoid valve (fig. 1-Q).
4. Once these procedures have been completed, the table is ready for ironing. During the ironing, the icon  can be:
- ON: when the board is resetting the correct pressure in the boiler;
 - OFF: when the machine has reached the optimum pressure for ironing.


10. WATER CHARGING ICONS

While ironing, the icon  will switch on. This means that water is being pumped into the boiler.

When the icon  and the warning "WARNING: BLOCKED PUMP" are displayed, this indicates that the pump remained without water for a long time, or an obstruction does not allow water to be pumped into the boiler. In this case, the "pump saving" device will be activated and the pump will not work.

To restore the correct functioning proceed as follows:

- turn off the boiler by pressing the proper key;
- check that there is sufficient water pressure in the water system and that there are no obstructions;
- drain all the steam by pressing the iron micro-switch;
- press the key again to turn on the boiler.

If the icon  and the warning "WARNING: BLOCKED PUMP" continue to be displayed, do not insist. Disconnect the machine from the power grid and have it checked by qualified personnel.

11. WARNINGS


The machine completely stops working in the following cases:

- abnormal overheating of the boiler or when the safety thermostat does not work properly because it is damaged. "WARNING: BOILER OVERHEATING" will be displayed.
- breakdown of the ironing board temperature probe. "WARNING: IRONING BOARD PROBE BREAKDOWN" will be displayed.

In both cases turn off the machine through the main switch, wait a few minutes and switch on again.


If the problem remains, turn off the machine and have it checked by a technician.

12. SET MENU

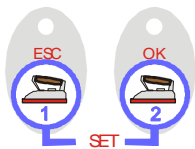

To access to the SET menu, the electronic card must be in "stand-by" mode. Press both keys simultaneously as shown on the left. To exit the SET mode, press both keys simultaneously or wait for 5 seconds.

To move through the different items within the menu, use the keys +/- shown on the right:



Menu:

HOURS OF WORK			TOTAL HOURS	Cannot be zeroed	To exit
			PARTIAL HOURS	Zeroing of hours 	

TOTAL HOURS: computation of the total hours the machine has worked for. This data cannot be zeroed.

PARTIAL HOURS: computation of the hours the machine has worked for since last zeroing. To zero the data, follow instructions as per table.


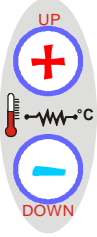


MAINTENANCE	Password needed. Service centre authorized access only
-------------	--

MANUFACTURER	Password needed. Manufacturer authorized access only
--------------	--

WARNING: if by pressing SET the warning "PASSWORD INSERTION BLOCKED" is displayed, this means that the wrong password has been typed 10 times in the "MAINTENANCE" or "MANUFACTURER" menu.

To unblock the menu, contact the authorized service centre or the manufacturer.

To set the desired language, see table below:

LANGUAGE			ITALIAN	To confirm language 	To exit 
			ENGLISH		
			GERMAN		
			FRENCH		
			SPANISH		
			PORTUGUESE		
			POLISH		
			RUSSIAN		
			SLOVENSKI		

13. MAINTENANCE RESET

The electronic board is set up in order to remind the operator to carry out regularly the maintenance.

When maintenance is required, "MAINTENANCE SUGGESTED" will be displayed and the 3 icons shown below light up together:



When this warning appears it is suggested to carry out the maintenance, especially the following procedures:

- replace or wash the cover of the ironing board;
- clean water filter (see chapter "CLEANING OF WATER FILTER");
- clean boiler probe (see chapter "CLEANING OF THE BOILER PROBE").



Once maintenance has been carried out, it is necessary to reset the warning. To do this press the key shown on the left until "RESET" is displayed. At this point it is possible to release the key, as the zeroing of the maintenance has been correctly done.

The number of hours between the maintenances to be done is calculated approximatively and it refers to a machine that works under "normal" conditions.

According to the type of water and the use of the machine, maintenance may be required even earlier.

The display of the warnings is only a reminder and it doesn't block or restrict the operation of the machine.

14. CONTROL AND SUBSTITUTION OF FUSES


The fuses protect the machine and checking of the fuses is the first things to be done in case something doesn't work. Substitution of fuses is required when a short circuit or an overload occurs; in any case before replacing the fuses it is important to eliminate the cause which determined its breakage.

To gain access to the fuses the main switch must be on pos. "0" and the four screws must be unscrewed from the blue panel. The position of the fuses is indicated in Fig. 2.

In order to replace the broken fuses of the electronic board unscrew them by using a screwdriver, exerting a slight pressure and rotate.

For the replacing of the electricity grid fuses just open the panel.

Warning: substitute fuses only with ones of the same type and performance.

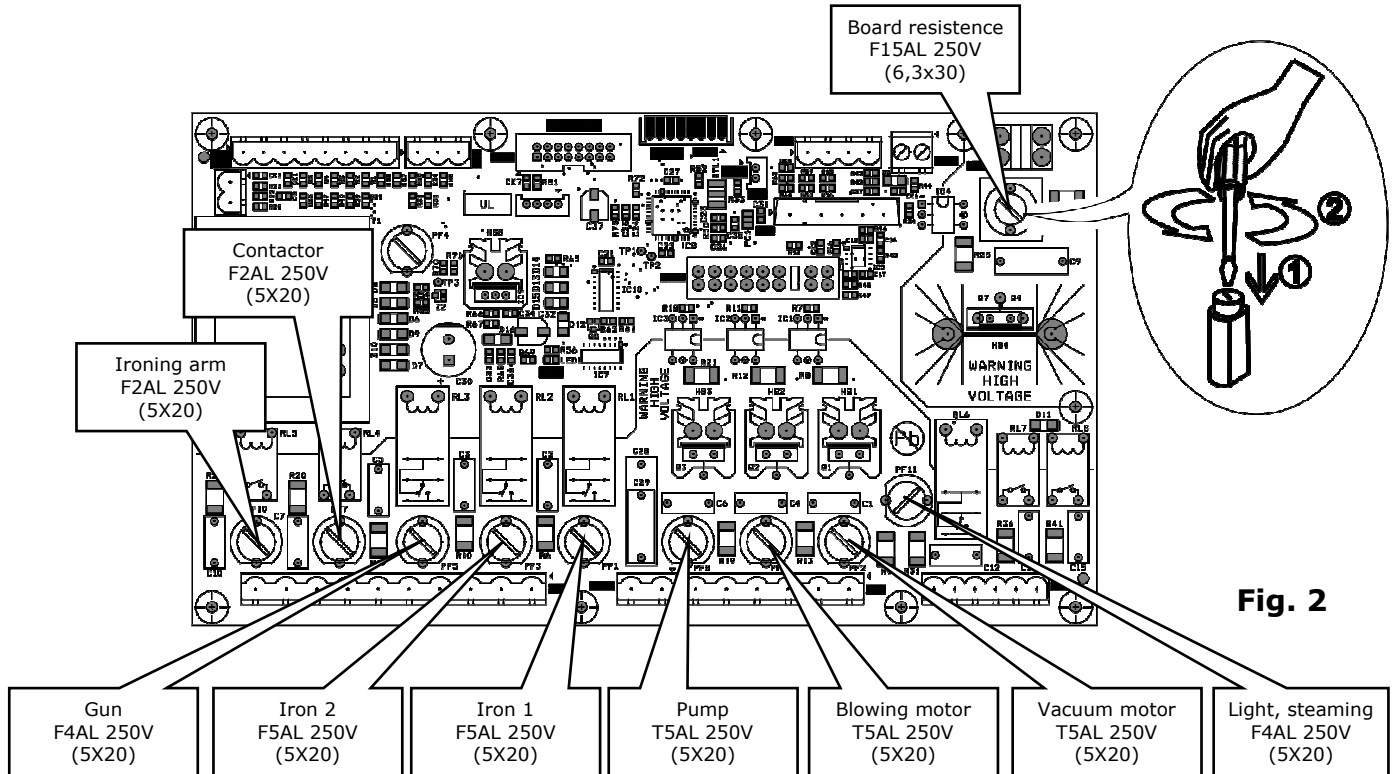

15. GENERAL WARNINGS

1. Avoid connecting the device to multiple sockets and/or extensions which are not suitable to its power.
2. Keep children away from the ironing board, both when it is on and off.
3. Place the equipment on a steady surface indoor with a temperature between +10°C and +40°C. Do not place it outside or expose it to the action of atmospheric agents.
4. The operator must never leave the ironing board unattended when plugged into the electricity grid.
5. When in use, do not bring it near thermolabile or inflammable parts.
6. Always turn off the machine by pressing the specific main switch before disconnecting it from the electricity grid.
7. Always disconnect the plug from the electricity grid when the equipment is not in use and before any maintenance or cleaning procedure.
8. Keep the electric wire away from hot surfaces and be careful not to crush it under doors or to step on it.
9. Never use the ironing board without the cover (Prontotop) properly positioned.
10. Do not get on the linen support, sit on the board, nor lean against the sleeve arm: the ironing board has been specifically designed for ironing of garments.
11. Never leave garments on the board when it is switched on and unattended because they might get spoilt or even burnt.
12. Never leave the iron on the board or on the garments when it is switched on.

13. Do not place the iron directly on the metal part of the iron rest. Always place the iron on the proper rubber iron rest.
14. Do not iron directly on people.
15. Do not rest or use iron on zippers, hooks, rings, etc ... to avoid scratching the iron plate.
16. Only use normal drinkable water from the water supply.
17. Do not add additives of any kind to water.
18. Do not discharge the boiler when the machine is still functioning (see chapter "boiler discharge").
19. Check that the water supply pipes do not freeze during winter.
20. During long periods of inactivity close the water, completely discharge the boiler and unplug the machine from the electricity grid.

16. IRONING

The vacuum of the ironing board helps keep the garments stretched, avoids stagnation on the board and eliminates any humidity during ironing, making this operation easier and faster.

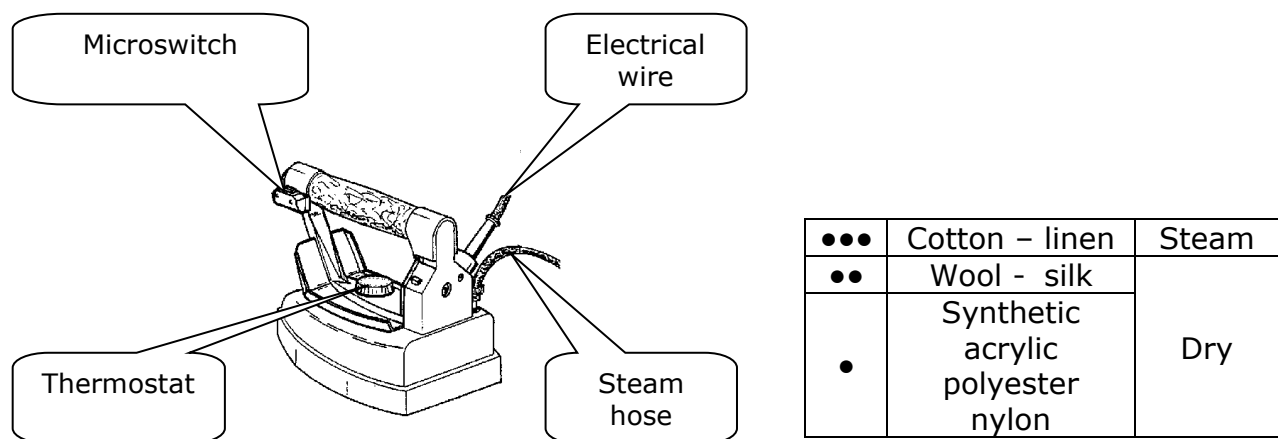


Fig. 3

To iron:

1. Adjust the iron temperature (fig. 3). For dry ironing, you can set the thermostat on the various positions, depending on the type of fabric you want to iron (refer to the label instructions). For steam ironing you must necessarily adjust the thermostat on the "cotton" or "linen" position.
2. To iron, run the iron on the garments and press the micro-switch (fig. 3) of the iron at intervals so that steam comes out. At the same time press the vacuum pedal too. It is recommended to vacuum frequently and to keep the vacuum pedal pressed for a few extra seconds after the micro-switch of the iron has been released. This in order to dry the garment.
3. For delicate, blue or black garments, we recommend the use of the special anti-shine shoe (optional accessory).
4. We suggest to place the iron only on the rubber iron rest.

The ERA BLOWING has two pedals: one for vacuum and the other for the blowing. The blowing function is recommended for the ironing of delicate and light clothes since it allows to "lift" the garments from the board and to iron them only with the steam without the pressure of the iron.

The ERA VAP is equipped with one pedal for vacuum and also one pedal for steaming. The steaming function is used to give steam from the ironing surface to thick garments.

After steaming has been completed it is recommended to activate vacuum to avoid water stagnation on the ironing board and to dry the fabric dampened by steam.

For a good steaming, set the heating of the ironing surface to the maximum temperature.

NOTE: if steam is used frequently it is normal if some water exits from air discharge of the motor.

The suction deviation damper (fig. 1-F), present only in the model Era Vap, must be always open towards the right to allow the operator to vacuum both from the ironing board and from the ironing arm. When you iron on the ironing arm and you want to increase vacuum power on it, close the suction deviation damper (in this case the vacuum is only on the ironing arm). Do not iron on the board with the suction deviation damper closed because rings or stains could form due to lack of vacuum.

The ERA MAX VAP is equipped with three pedals: one for vacuum, one for blowing and one for steaming.

17. BOILER DISCHARGE

Discharge the boiler at least once a week.

Connect the discharge tap (M 1/2" GAS attachment) to the drainage system by using a thermo-insulated rigid tube (copper or steel). Alternatively, it is possible to discharge the water into a heat-resistant tank.

Carry out the following procedures:

1. unplug the machine from the electricity grid after ironing has been completed;
2. wait half an hour after turning off the ironing board to allow the machine to cool down (the ideal pressure for a safe discharge is 0,5 bar);
3. slowly open the discharge tap, located on the back of the machine, wait for all the water to drain out and finally close the boiler discharge tap.

If the drained water still contains dirt, repeat the procedure until the water is clean.

Wear work gloves to avoid possible burns and pay attention to avoid splashing of hot water onto the operator!

18. ELECTRICAL RISKS

The following situations are considered dangerous for the operator:

1. when the earth protector switch is activated;
2. using the ironing board during thunderstorms;
3. using the ironing board without proper protection for feet (without shoes...) or with wet hands or feet;
4. using the ironing board with damaged electric cables;
5. using the ironing board when the electric cable touches hot parts of the machine;
6. when the iron overheats or loses water;
7. washing or cleaning the iron with water;
8. when there is loss of water and/or steam from the machine;
9. when the machine is not connected to a good ground wire with observance of the law in force.

19. MECHANICAL RISKS


The following situations are considered dangerous for the operator:

1. using the machine for different purposes other than ironing;
2. when you continue to use the machine after the safety valve has been activated (steam pressure inside the boiler is too high, check the manometer).

20. THERMAL RISKS

The following situations are considered dangerous for the operator:

1. touching the iron base when in function;
2. when discharging the boiler without following the instructions in the manual;
3. when you direct the jet of the steam toward people or animals.

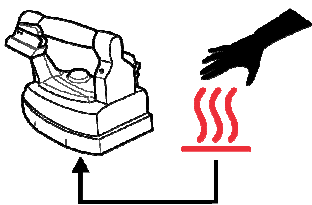

Caution: Thermal danger!
Incandescent iron plate

Some parts of the machine can become extremely hot: use it very carefully and disconnect the plug when not in use.

It is advisable to proceed with the cleaning of the machine only when it cools down.

21. INTERVENTIONS AND SMALL REPAIRS

1. It is recommended to replace the cover (Prontotop):
 - when "MAINTENANCE SUGGESTED" is displayed;
 - when the vacuum of the board is unsatisfactory or if stains appear on it. The stains can appear also if the operator uses too much steam and/or doesn't use vacuum enough (in this case decrease the steam flow and use more vacuum).The replacement of the cover must be carried out with the ironing board switched off and cold. N.B.: the Prontotop can be washed 1 or 2 times.
2. Immediately replace the electric wire when it is damaged. The wire is supplied by the manufacturer or authorized service centres. Do not use the equipment with a damaged electric wire.
3. Check that there are no losses from the discharge tap. If there are, replace it.
4. Clean the air vacuum/exhaust duct, the fan of the vacuum/blowing motor and any air intake from accumulations of dust which could reduce the vacuum/blowing performance.

22. CLEANING OF THE WATER FILTER

The cleaning of the water filter (fig. 4) is to be done whenever the warning "MAINTENANCE SUGGESTED" is displayed. If the water is full of impurities, cleaning should be done more often.

To clean the water filter:

1. turn off the main water supply tap;
2. identify the filter, which is close to the water entrance;
3. unscrew the filter plug by using a wrench;
4. take out the filter;
5. by using running water, clean the filter in order to eliminate all impurities;
6. re-assemble the filter, fix with the wrench and turn on the main water supply tap, checking at the same time if there any leakages.

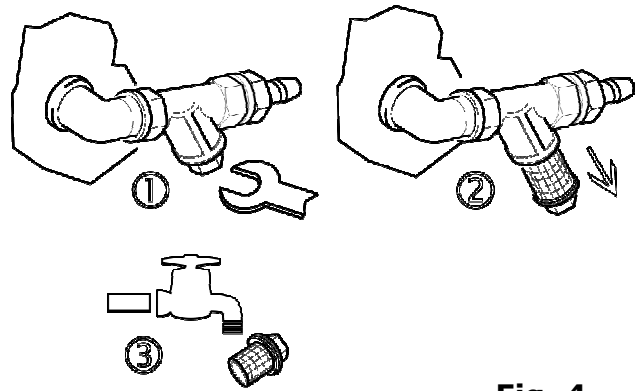


Fig. 4

23. CLEANING OF THE BOILER PROBE

The cleaning of the boiler probe (fig. 5) is to be done whenever the warning "MAINTENANCE SUGGESTED" is displayed.

In the event that the water is very hard it may be necessary to clean it more frequently.

To clean the probe of the boiler, do as follows:

1. open the side panel of the machine;
2. identify the boiler and the probe;
3. disconnect the "faston" from the probe;
4. unscrew the probe by using a wrench and take it out;
5. clean the probe with sandpaper in order to eliminate all encrustation;
6. re-assemble the probe and check that there are no leakages when there is pressure inside the boiler;
7. close the side panel.

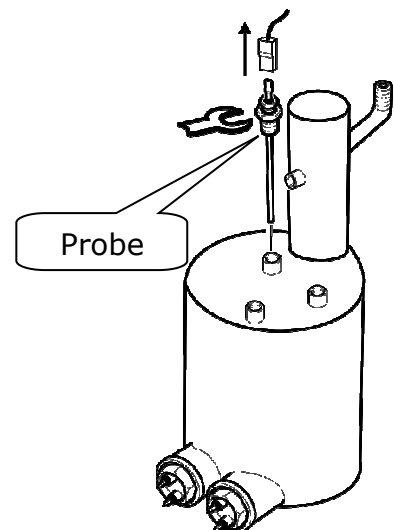




Fig. 5

24. COMPULSORY PERIODICAL MAINTENANCE

(To be carried out exclusively by authorized service centres, by the manufacturer or qualified technician)

Compulsory maintenance is signalled when the icon  "SERVICE NEEDED" is displayed. Contact **only** your reseller, authorized service centres or the manufacturer in order to carry out the necessary maintenance. Once the check has been completed, the authorized personnel will reset the icon which is shown on the display.

The number of hours between the maintenances to be done  is calculated approximatively and it refers to a machine that works under "normal" conditions. It is up to the operator to determine the exact sequences of maintenance procedures according to the following parameters:

- water hardness;
- other particular conditions.

It is also recommended to annually check the correct functioning of the safety valve.

This machine was designed to work maximum 8 hrs. per day, 5 days a week.

25. PACKING

The ironing board can be packed with cellophane or in a cardboard box which cannot be turned upside down.

As this is not a stiff package it is not shock-resistant. We therefore suggest to handle the packed machine with utmost care and not to use it as a stool or support.

Keep away from children any plastic bags, boxes, polystyrene etc. used for packing, as they may be dangerous.

26. TRANSPORT

Transport the packed machine to the point nearest to where it has to be installed and then unpack it. The equipment has to be transported only by fork lift or hand pallet trucks.

It is recommended not to place the equipment too close to the walls and other machines, in order to facilitate the use and a perfect maintenance.

27. STORAGE


If necessary, store the machine still packed in a suitable place, protected and not subject to bad weather.

28. WARRANTY TERMS

The manufacturer's warranty becomes void:

- in the event of repairs carried out by unauthorized personnel or service centers;
- total or partial failure to follow the instructions contained in this manual;
- for poor storage, lack of maintenance/cleaning or incorrect assembly;
- when there are damages caused by the customer;
- when there are failures or damages that do not derive from a manufacturing defect;
- when there are damages deriving from a fortuitous event (fire, short circuit) or due to third parties (tampering);
- when there are damages caused by limescale;
- when the damage has been caused by the use of water different from that indicated in the instructions (see "WATER CONNECTION" chapter);
- when using the machine for a purpose different than the one specified in this manual;
- when using non-genuine spare parts or accessories, modified or not suitable for the appliance.

29. DISPOSAL

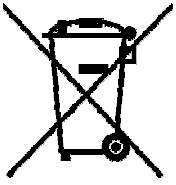

According to the directive 2012/19/UE on waste of electrical and electronic equipment, do not treat this product as urban waste.

This appliance is marked according to the directive 2011/65/UE regarding restriction of use of specific dangerous substances in electrical and electronic equipment.

This symbol on the product or on its packaging indicates that this product must not be treated as urban waste. Instead it shall be handed over to a recycling center for the recycling of electrical and electronic equipment.

Ensuring this product is disposed of correctly will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help preserve natural resources.

The abusive disposal of the product by the user may lead to administrative sanctions.

Every product manufactured by **BATTISTELLA Co.** is subject to the following limitations:

- ❖ **Battistella B.G. S.r.l.** guarantees that this machine, correctly installed and used, works accordingly to this manual of instructions. Each implicit guarantee is limited by law as from purchase date.
- ❖ **Declination of responsibility for consequential damages: Battistella B.G. S.r.l.** will never take the responsibility for any damage (included, without any limitation, consequential damages due to loss or no profit, cutback or any other economical loss) deriving from the use of a BATTISTELLA machine, even in case the Company had been previously informed of such kind of possibility.

Should you need **further information** about this manual, please contact **Battistella B.G. S.r.l.** or the person who sold you the machine.
